






P80.50-2497-09

Shown on model 164.1 with engine 272

- 1 Engine partition wall seal
- 2 Bolts
- 3 Cover
- 4 Bracket
- 5 Wiring harness

- 6 Nut
- 7 Bolts

H3 Alarm signal horn

 	Remove/install		
1	Partially loosen engine partition wall seal (1)		In right area.
2.1	Remove wiring harness (5) from bracket (4)		If present.
3	Unscrew bolts (2) and remove cover (3).		Installation: The cover (3) has an additional retaining lug in the rear area. It should reach into a corresponding lug in the bottom section of the dividing wall.
4	Unscrew nut (6) and remove alarm signal horn (H3)		
5	Unscrew bolts (7) to disconnect alarm signal horn (H3) electrically.		
6	Remove alarm signal horn (H3)		
7	Install in the reverse order		