


ENGINE 113, 156, 272, 273 in MODEL 164 with CODE (494) USA version

1 Fuel tank

B4/3 Fuel tank pressure sensor

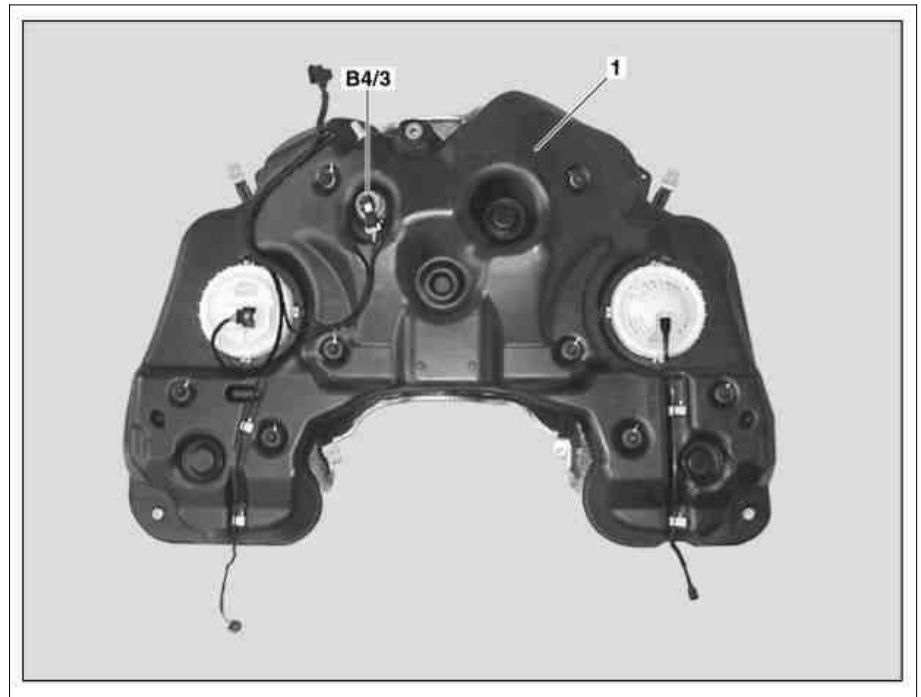

P47.10-2368-06

☒ ☒	Remove/install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Switch off ignition		
2	Remove fuel tank (1)		AR47.10-P-4100GZ
3	Release and disconnect electrical connector on sensor (B4/3)		
4	Carefully unclip sensor (B4/3) on fuel tank (1)	⚠ To avoid damage, do not turn or tilt the sensor (B4/3). i Installation: Replace seal and coat with a suitable antifriction agent. Push in sensor (B4/3) all the way into the fuel tank (1).	
5	Install in the reverse order		