

1. Open the panel in the wheel well (remove plastic pin and slide)
2. Open the headlight assembly to get access to the bulb (turn)



3. Remove the blub (turn)

4. Remove the blub from the holder (pry)



5. Remove the metal clip from the holder (lift off over the tabs and push)
6. Remove the grommet from the new blub (cut)
7. Attach the metal clip to the HID blub (push wires through and then tape) pushing the wire through (it is a bit tight).



Using tap to attach the clip to the light.



8. Place new blub back in the headlight



(turn)

9. Attach the error canceler to the ballast



10. Attach the bulb power to the ballast



11. Attach the power wires from the ballast to the plastic bulb holder.



12. Test (if not working change the polarity on the power leads (switch the red and the black))

13. Push everything into the light assembly.



14. Test

15. Close it up.