


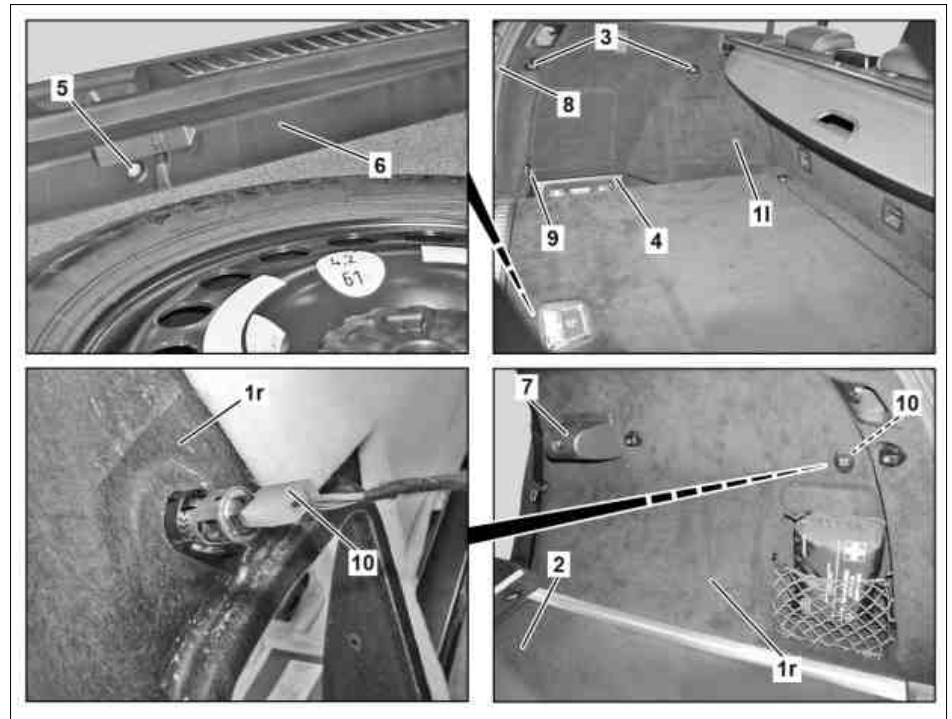


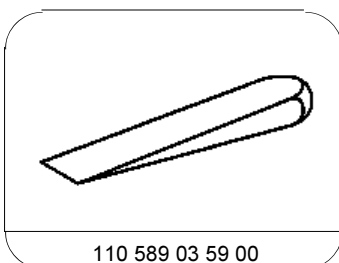
MODEL 166.0

- 1l Left side paneling
- 1r Right side paneling
- 2 Load compartment floor
- 3 Anchoring hook
- 4 Stowage compartment
- 5 Screw
- 6 Cover strip
- 7 Support
- 8 Edge guard
- 9 Anchoring lug
- 10 Electrical connector



P68.30-3576-06

 	Remove/install		
1	Release rear seat backrest and fold down		
2	Remove load compartment cover		
3	Remove mount (7) from load compartment cover		
4	Remove load compartment floor (2)		
5	Unscrew bolt (5) and remove cover strip (6)		
6	Remove storage compartment (4)	When removing left side paneling (1l)	
7	Remove anchoring hook (3) and anchoring lug (9)		
8	Remove edge guard (8) from D-pillar		
9	Unclip left and right side paneling (1l, 1r) from D-pillar paneling	i Installation: Ensure that clips are aligned correctly on D-pillar.  Mounting wedge	*110589035900
10	Pull right paneling (1r) out until electrical connector (10) is accessible	When removing right side paneling (1r)	
11	Disconnect electrical connector (10) from right side paneling (1r)	When removing right side paneling (1r)	
12	Remove left and right side paneling (1l, 1r)		
13	Install in the reverse order		



110 589 03 59 00

Mounting wedge