


MODEL 166

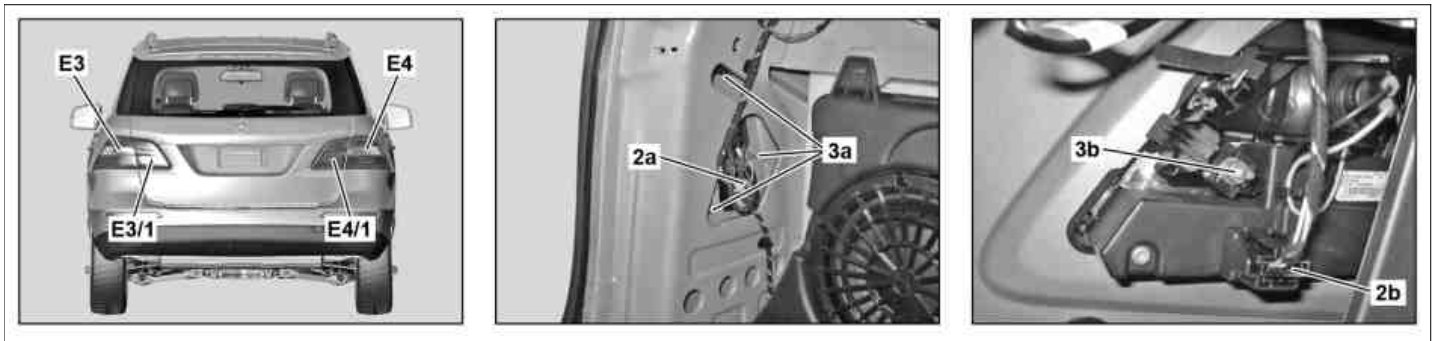

P82.10-6988-07


**Shown on model 166.004**

2a Electrical connector  
 2b Electrical connector  
 3a Nut  
 3b Nut

E3 Left rear lamp unit  
 E3/1 Inner left rear lamp unit  
 E4 Right rear lamp unit  
 E4/1 Inner right rear lamp unit

**Shown on vehicle with code Z04 (Light armoring)**


4 Cover plate  
 5 Screw/bolt

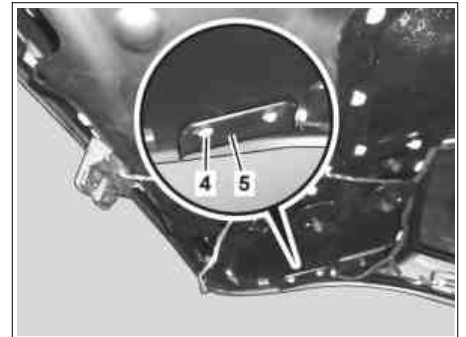

P72.20-3217-01

**Shown on vehicle with code Z04 (Light armoring)**


6 Cover for lamp unit E4  
 7 Screws/bolts  
 8 Nut  
 9 Screws/bolts  
 10 Nuts

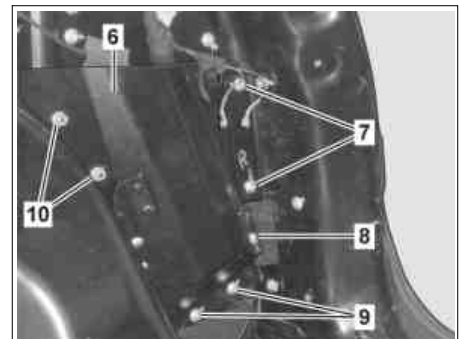

P82.10-7271-01

**Shown on vehicle with code Z04 (Light armoring)**

- 11 Cover for lamp unit E3
- 12 Nut
- 13 Screws/bolts
- 14 Screw/bolt

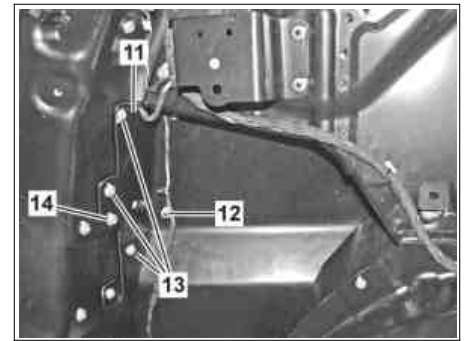

P82.10-7270-01

☒ ☒	Remove/install		
1	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit		
2.1	Detach side panel in trunk in upper area	MODEL 166.0	AR68.30-P-4800GQ
2.2	Remove cover in side panel in trunk	MODEL 166.8	AR68.30-P-4800GQX
3	Remove screws/bolts (7, 9) and nuts (8, 10)	MODEL 166.0 with CODE Z04 (Light armoring) When removing right rear lamp unit (E4). Loctite 243	*BR00.45-Z-1066-01A
4	Remove lamp unit cover E4 (6)	MODEL 166.0 with CODE Z04 (Light armoring) When removing right rear lamp unit (E4).	
5	Remove screws/bolts (13, 14) and nut (12)	MODEL 166.0 with CODE Z04 (Light armoring) When removing left rear lamp unit (E3). Loctite 243	*BR00.45-Z-1066-01A
6	Remove lamp unit cover E3 (11)	MODEL 166.0 with CODE Z04 (Light armoring) When removing left rear lamp unit (E3).	
7	Release and disconnect electrical connector (2a)	When removing left rear lamp unit (E3) or right rear lamp unit (E4).	
8	Unscrew nuts (3a)	When removing left rear lamp unit (E3) or right rear lamp unit (E4).	
9	Remove left rear lamp unit (E3) or right rear lamp unit (E4) from rear fender		
10	Remove center door lining from rear-end door	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1).	AR72.20-P-3520GQ
11	Remove screws/bolts (4) and remove cover (5)	MODEL 166.0 with CODE Z04 (Light armoring) When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1).	
12	Release and disconnect electrical connector (2b)	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1).	
13	Loosen nut (3b)	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1).	
14	Remove inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1) from liftgate		
15	Install in the reverse order		

**Repair materials**

Number	Designation	Order number
BR00.45-Z-1066-01A	Loctite 243	A 613 989 09 71 09