


MODEL 166, 292

Shown on model 166


- 1 Cover
- 2 Bolts

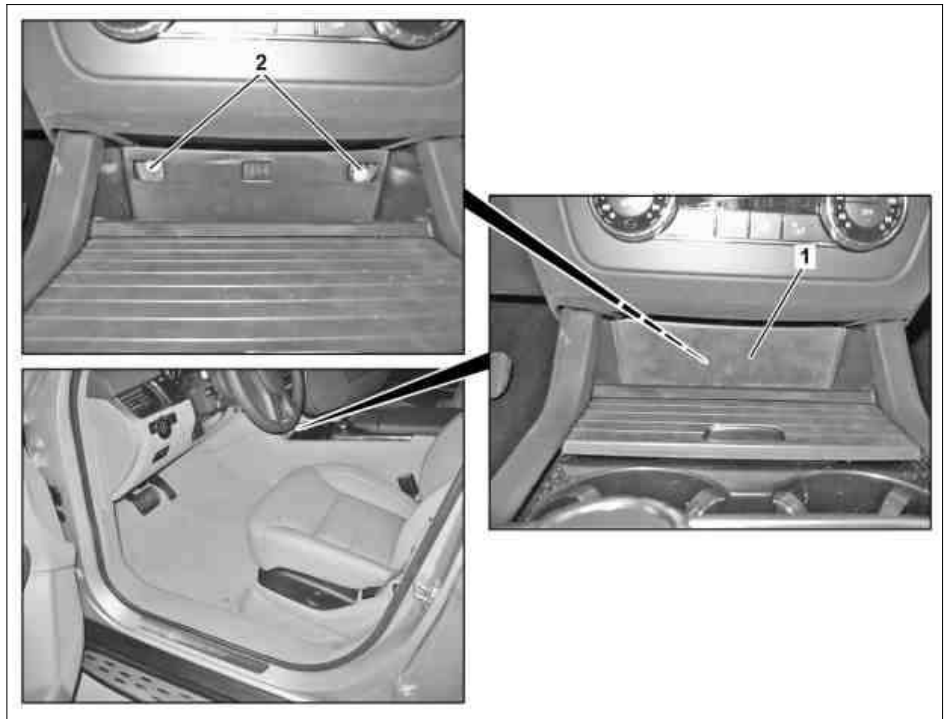

P68.20-4434-06

Shown on model 166


- 3 Cover
- 4 Bolts
- 5 Bolts
- 6 Cover
- 7 Electrical connectors
- 8 Electrical connectors

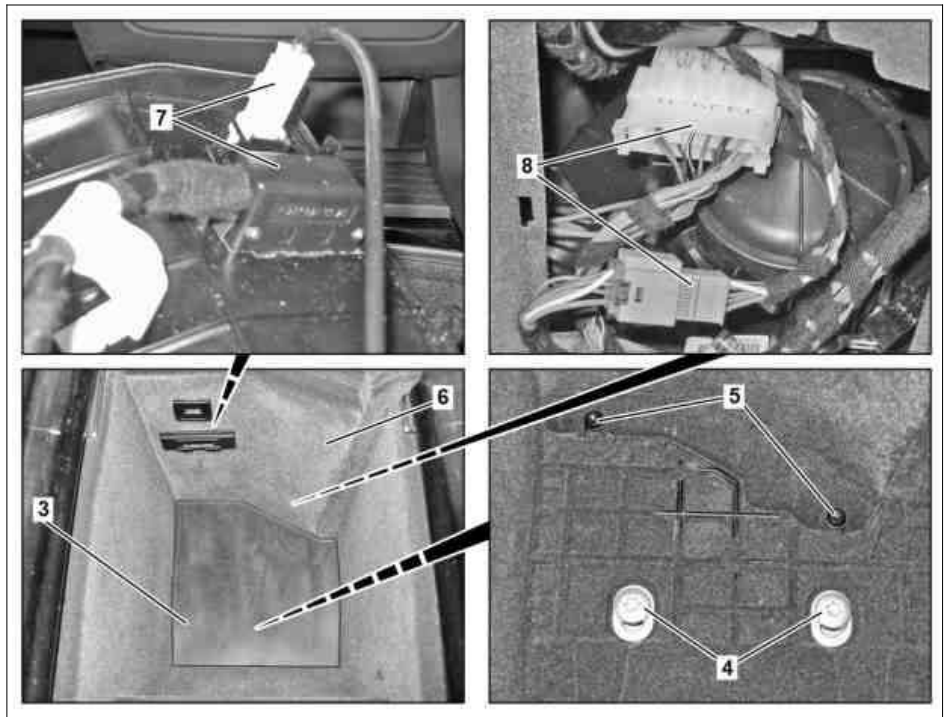

P68.20-4436-06

Shown on model 166

- 9 Cover
- 10 Bolts
- 11 Electrical connectors

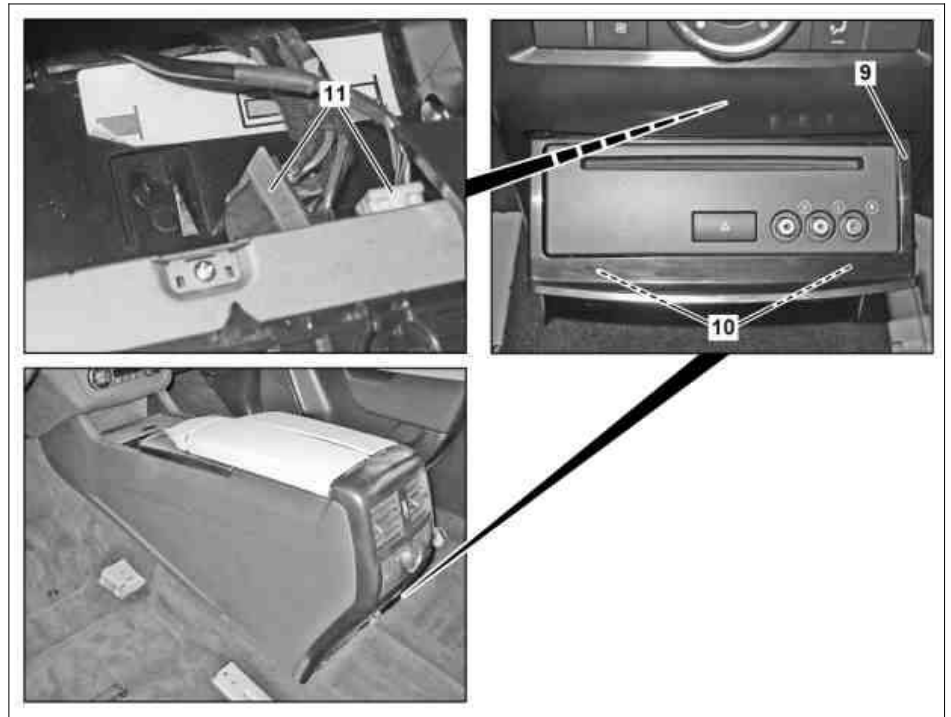

P68.20-4437-06

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove cover (1)		
3	Unscrew bolts (2) below		
4	Remove cover (3)		
5	Unscrew bolts (4, 5) below		
6	Slightly pull paneling (6) upward and remove toward rear		
7	Unclip electrical connectors (7)		
8	Guide lower electrical connector toward front through opening out of center console		
9	Disconnect electrical connections (8)		
10	Pull DVD player downwards	MODEL 166, 292 with CODE 864 (Rear compartment entertainment package) <b>Installation:</b> Ensure that catch tabs arrest audibly.	
11	Unclip cover (9)	MODEL 166, 292 with CODE 864 (Rear compartment entertainment package) <b>Installation:</b> Ensure that upper retaining clips are seated correctly.	
12	Unscrew bolts (10) below	MODEL 166, 292 with CODE 864 (Rear compartment entertainment package)	
13	Slightly pull out DVD player until electrical connectors (11) are accessible	MODEL 166, 292 with CODE 864 (Rear compartment entertainment package)	
14	Disconnect electrical connectors (11)	MODEL 166, 292 with CODE 864 (Rear compartment entertainment package)	
15	Lift rear center console and remove to passenger side	Helper required.	
16	Install in the reverse order		