


Model 166, 172.4, 204, 205, 207, 212, 213, 218, 238, 253, 292, 293

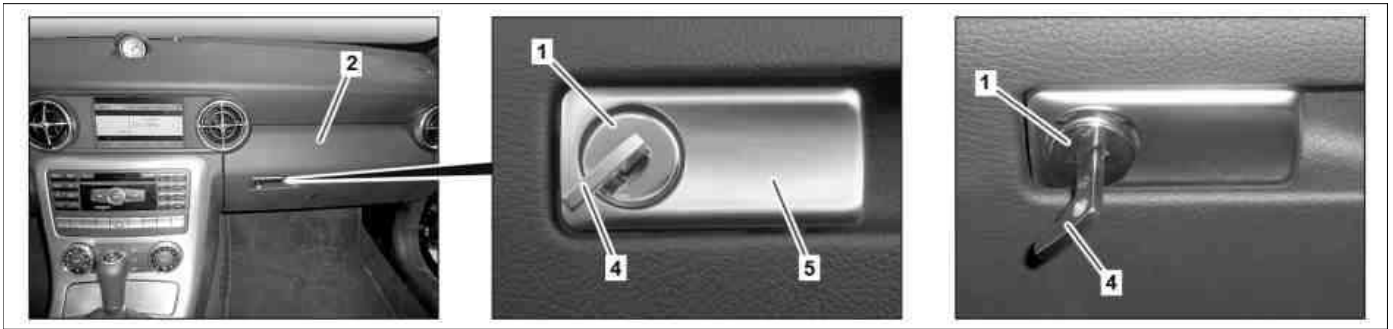

P68.10-4627-07

Shown on model 172.4

- 1 Lock cylinder
- 2 Glove compartment

- 4 Emergency key
- 5 Housing

Shown on model 172.4

- 3 Eccentric disk
- 5 Housing



P68.10-4628-11

☒	Remove		
1	Insert emergency key (4) into lock cylinder (1) and turn approx. 45° as shown.		
2	Remove lock cylinder (1) with emergency key (4) from housing (5).	i Hold housing (5).	
◀	Check		
3	Check position of edge (arrow A) of eccentric disk (3) in housing (5).	i The edge (arrow A) of the eccentric disc (3) must be at approx. 45° as shown in the figure. i Model 166.### 2#, 172.4### 2#, 204.### 2#, 205.### 2#, 207.### 2#, 212.### 2#, 213.### 2#, 218.### 2#, 238.### 2#, 253.### 2#, 292.### 2#, 293.### 2# The positions of the edges (arrows A and B) are turned 180°.	
4	Correct position of eccentric disk (3) at edges (arrow B).	If required. ⚠ Do not press to eccentric disk (3) in axial direction. Otherwise the eccentric disk (3) can be pressed off of the housing (5). i Turn eccentric disk (3) at edges (arrow B).	
☒	Install		

5	Insert lock cylinder (1) into housing (5) in 45° position with the emergency key (4).	i Lock cylinder (1) should arrest noticeably.	
6	Remove emergency key (4) from lock cylinder (1).		