


**Model 166**  
as of model year 2016

**Model 292**


**i** The name for "DISTRONIC PLUS" has been changed; as of MYJ17/2, the designation will be "Distance Pilot DISTRONIC". The name for "Steering Assist" has been changed; as of MYJ17/2, the designation will be "Steering Pilot". The name for "COLLISION PREVENTION ASSIST PLUS" has been changed; as of MYJ17/2, the designation will be "Active Brake Assist". The name for "SPEEDTRONIC" has been changed; as of MYJ17/2, the designation will be "Limiter". The nomenclature changes are not taken into account in this documentation.

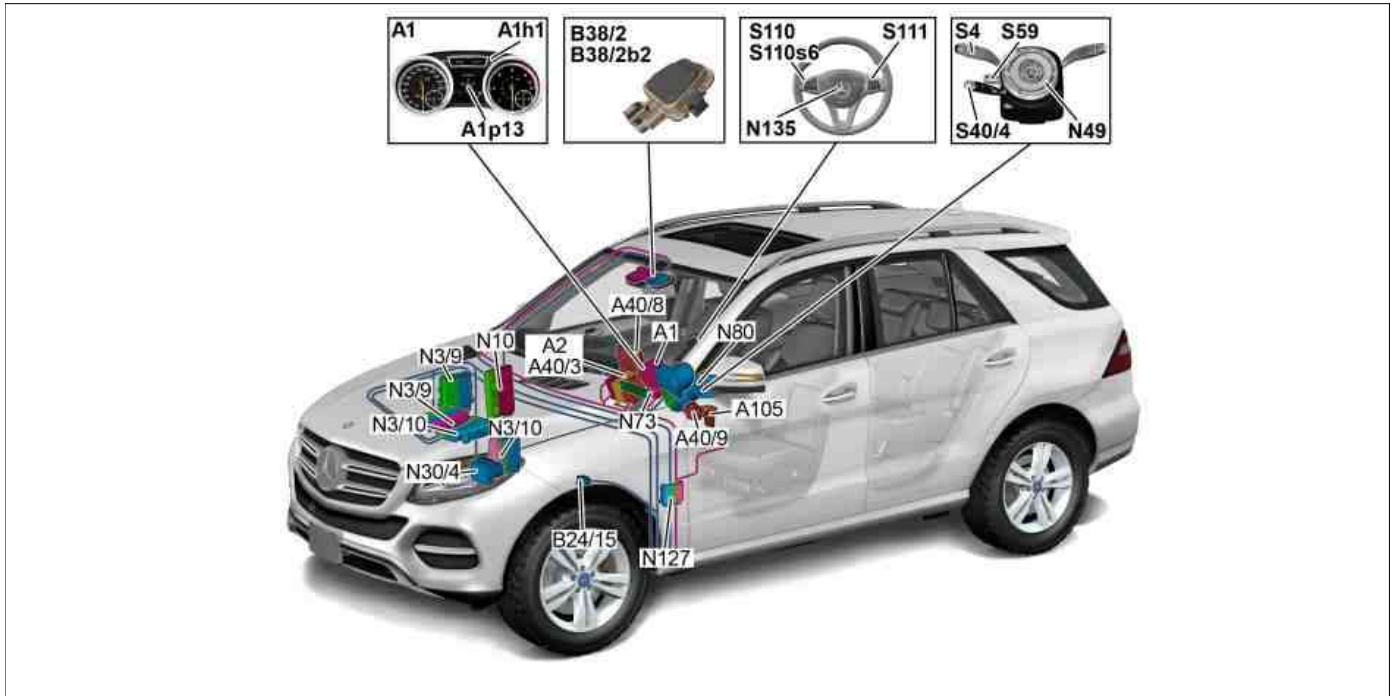

P54.33-3992-79

### Attention assistance system


A1	Instrument cluster	N10	SAM control unit
A1h1	Warning buzzer	N30/4	Electronic Stability Program control unit
A1p13	Multifunction display	N49	Steering wheel angle sensor
A2	Radio (with CODE 505 (Radio 20 NTG5 non-navigation-capable), with CODE 522 (Audio 20 radio))	N73	Electronic ignition switch control unit
A40/3	COMAND controller unit (with CODE 531 (COMAND APS))	N80	Steering column module control unit
A40/8	Audio/COMAND display	N127	Powertrain control unit (model 166.063)
A40/9	Audio/COMAND control panel	N135	Steering wheel electronics
A105	Touchpad (with CODE 531 (COMAND APS))	S4	Combination switch
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	S40/4	Cruise control lever
B38/2	Rain/light sensor with additional functions	S59	Steering column adjustment switch (with CODE 275 (Memory package))
B38/2b2	Light sensor	S110	Left multifunction steering wheel button group
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	S110s6	OK button
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	S111	Right multifunction steering wheel button group

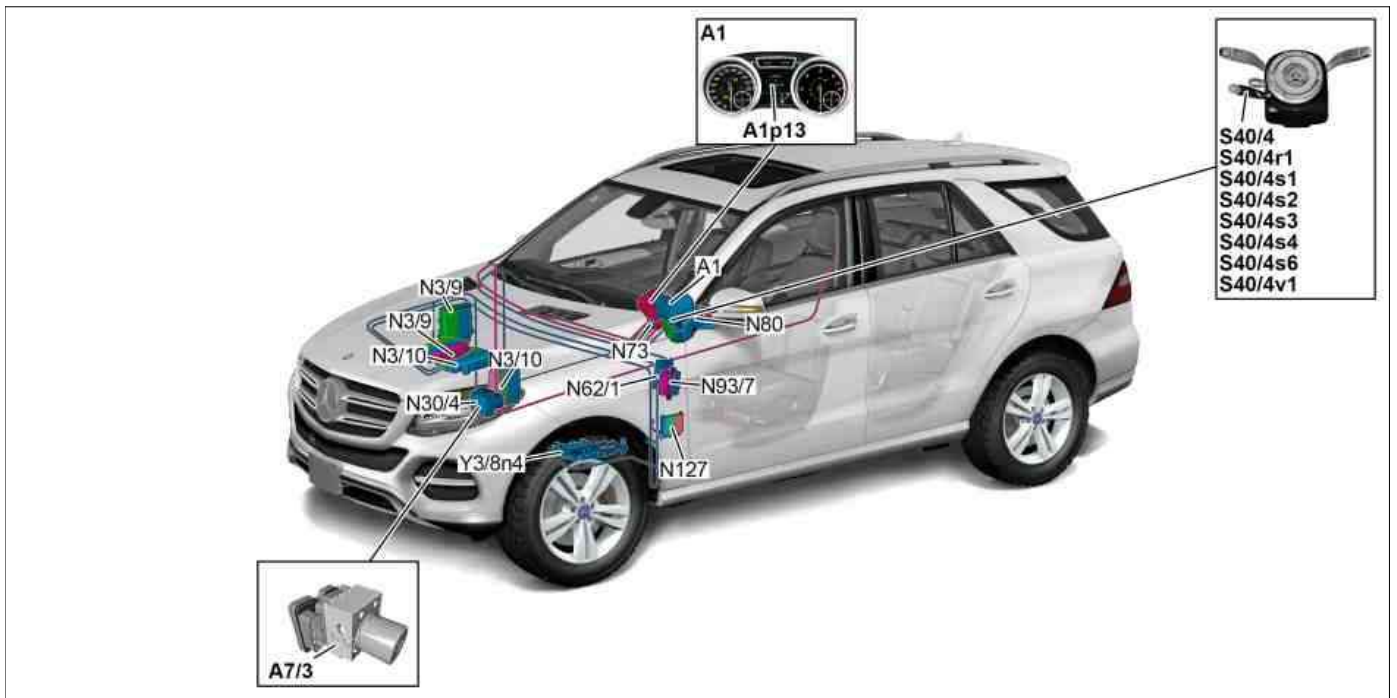

P30.30-2747-79

### Cruise control (CC [TPM])


A1	Instrument cluster	N127	Powertrain control unit (model 166.063)
A1p13	Multifunction display	S40/4	Cruise control lever
A7/3	Traction system hydraulic unit	S40/4r1	DISTRONIC control (with code 239 (DISTRONIC PLUS) or with code 266 (DISTRONIC PLUS with Steer Assist and Stop & Go Pilot))
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	S40/4s1	Resume from memory switch
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	S40/4s2	Decelerate and set switch
N30/4	Electronic Stability Program control unit	S40/4s3	Accelerate and set switch
N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))	S40/4s4	OFF switch
N73	Electronic ignition switch control unit	S40/4s6	SPEEDTRONIC switch (without code 494 (USA version))
N80	Steering column module control unit	S40/4v1	SPEEDTRONIC light-emitting diode (without code 494 (USA version))
N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))	Y3/8n4	Fully integrated transmission control control unit

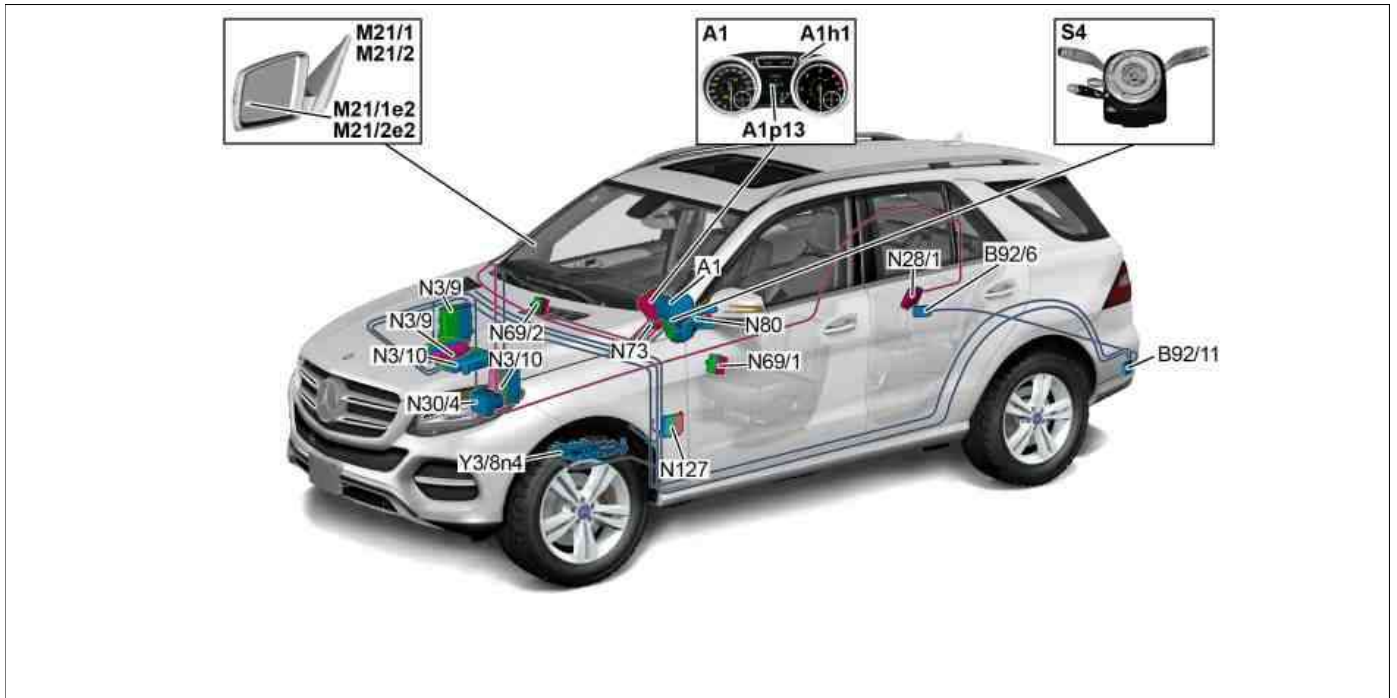

P54.71-2539-79

**Blind Spot Assist (with CODE 234 (Blind Spot Assist))**


A1	Instrument cluster	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A1h1	Warning buzzer	N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))
A1p13	Multifunction display	N30/4	Electronic Stability Program control unit
B92/6	Right outer rear bumper integrated radar sensor	N69/1	Left front door control unit
B92/11	Left outer rear bumper integrated radar sensor	N69/2	Right front door control unit
M21/1	Left outside mirror	N73	Electronic ignition switch control unit
M21/1e2	Left Blind Spot Assist readiness and warning indicator	N80	Steering column module control unit
M21/2	Right outside mirror	N127	Powertrain control unit (model 166.063)
M21/2e2	Right Blind Spot Assist readiness and warning indicator	S4	Combination switch
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	Y3/8n4	Fully integrated transmission control control unit

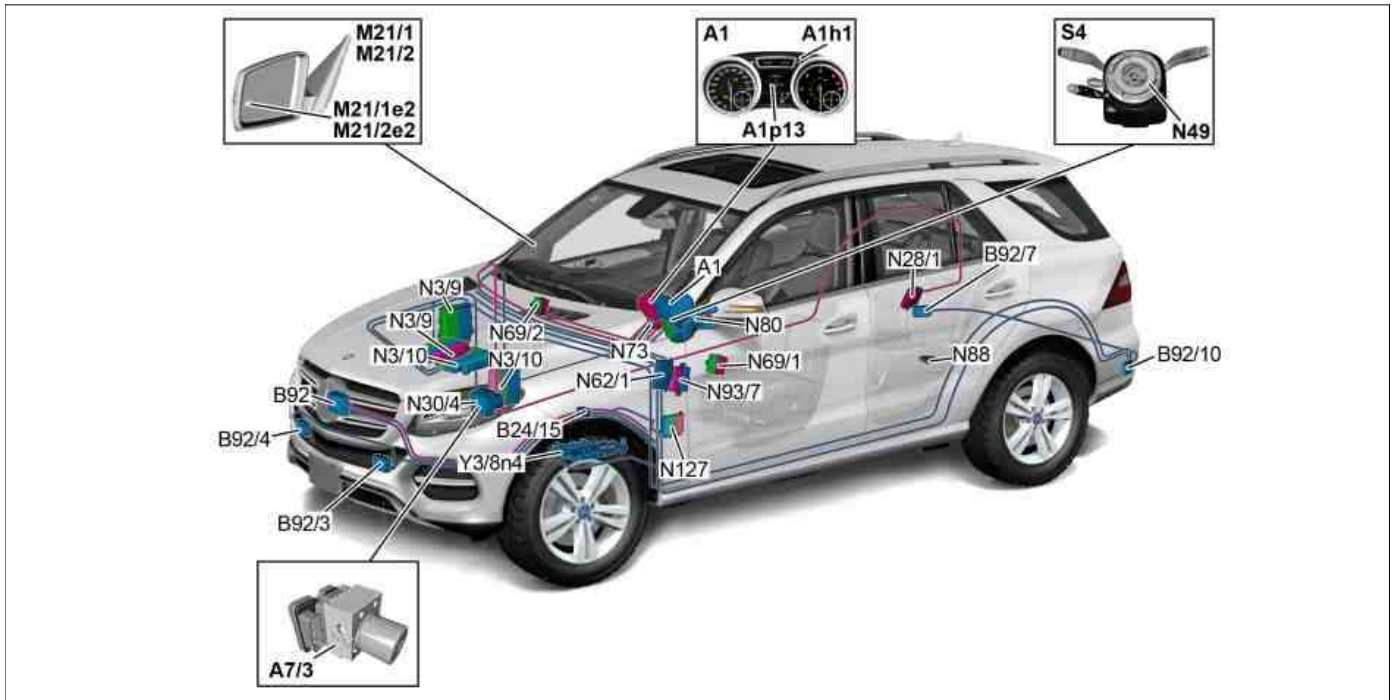

P54.71-2541-79

**Active Blind Spot Assist (with CODE 237 (Active Blind Spot Assist))**

A1	Instrument cluster	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A1h1	Warning buzzer	N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))
A1p13	Multifunction display	N30/4	Electronic Stability Program control unit
A7/3	Traction system hydraulic unit	N49	Steering wheel angle sensor
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))
B92	Front long-range radar sensor	N69/1	Left front door control unit
B92/3	Left front bumper radar sensor	N69/2	Right front door control unit
B92/4	Right front bumper radar sensor	N73	Electronic ignition switch control unit
B92/7	Right outer rear bumper radar sensor	N80	Steering column module control unit
B92/10	Left outer rear bumper radar sensor	N88	Tire pressure monitor control unit (with CODE 475 (Tire pressure monitor))
M21/1	Left outside mirror	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
M21/1e2	Left Blind Spot Assist readiness and warning indicator	N127	Powertrain control unit (model 166.063)
M21/2	Right outside mirror	S4	Combination switch
M21/2e2	Right Blind Spot Assist readiness and warning indicator	Y3/8n4	Fully integrated transmission control control unit
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)		

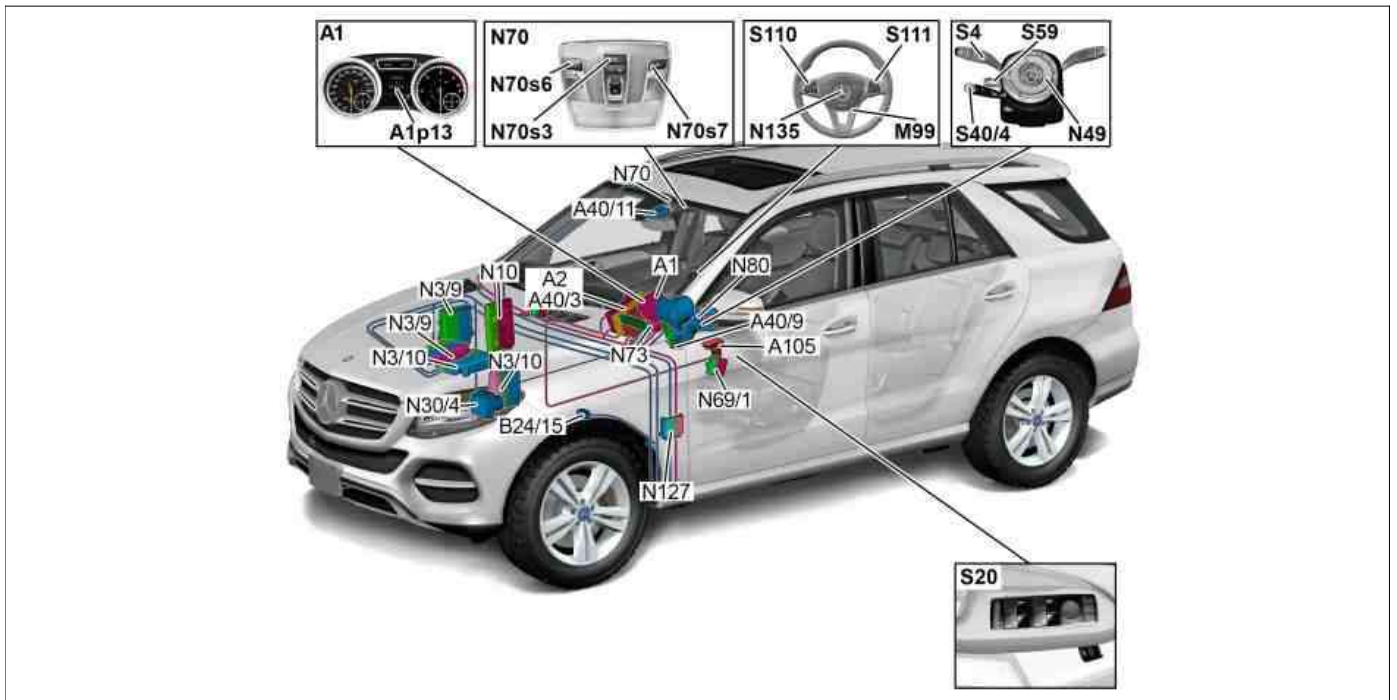


P54.71-2540-79

#### Lane Keeping Assist (with CODE 476 (Lane Keeping Assist))

A1	Instrument cluster	N70	Overhead control panel control unit
A1p13	Multifunction display	N70s3	Interior lamp automatic function switch
A2	Radio (with CODE 505 (Radio 20 NTG5 non-navigation-capable), with CODE 522 (Audio 20 radio))	N70s6	Left front reading lamp switch
A40/3	COMAND controller unit (with CODE 531 (COMAND APS))	N70s7	Right front reading lamp switch
A40/9	Audio/COMAND control panel	N73	Electronic ignition switch control unit
A40/11	Multifunction camera (with CODE 22P (Lane package))	N80	Steering column module control unit
A105	Touchpad (with CODE 531 (COMAND APS))	N127	Powertrain control unit (model 166.063)
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N135	Steering wheel electronics
M99	Steering wheel vibration motor	S4	Combination switch
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	S20	Driver-side power window and outside mirror adjustment switch group
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	S40/4	Cruise control lever
N10	SAM control unit	S59	Steering column adjustment switch (with CODE 275 (Memory package))
N30/4	Electronic Stability Program control unit	S110	Left multifunction steering wheel button group
N49	Steering wheel angle sensor	S111	Right multifunction steering wheel button group
N69/1	Left front door control unit		




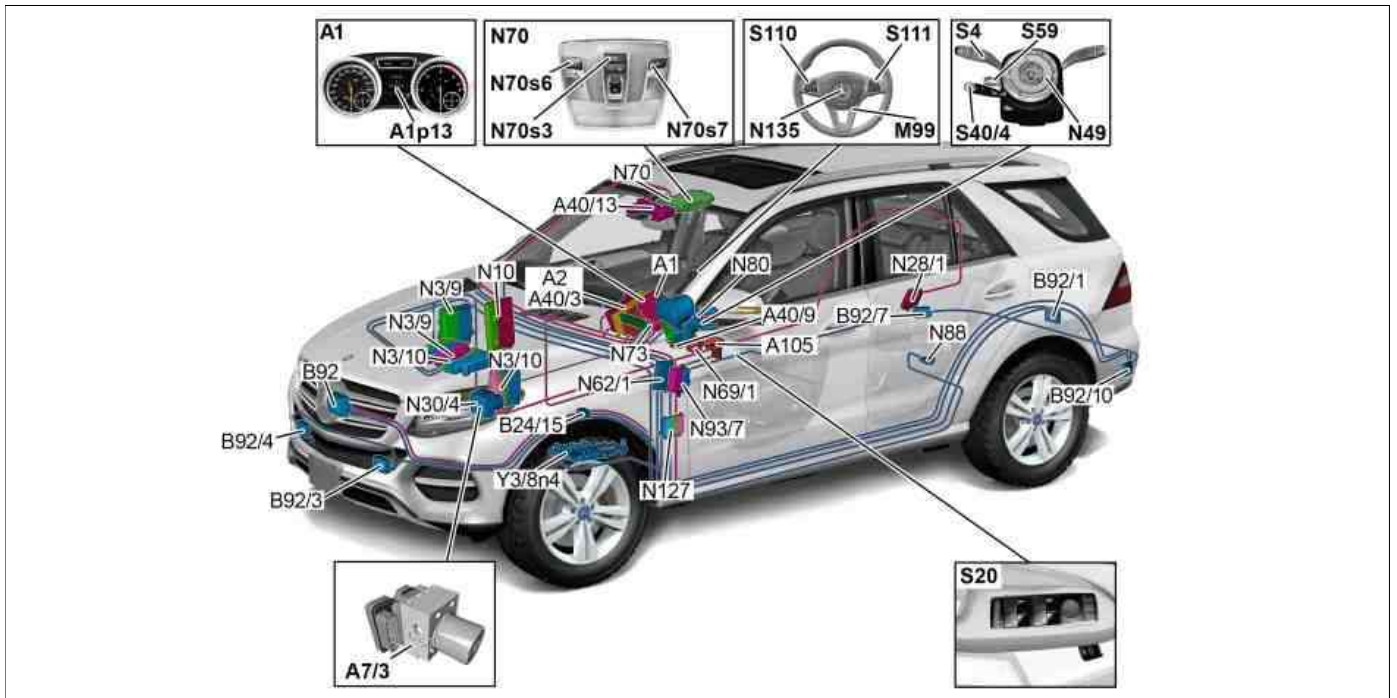

P54.71-2542-79

#### Active Lane Keeping Assist (with CODE 238 (Active Lane Keeping Assist))


A1	Instrument cluster	N49	Steering wheel angle sensor
A1p13	Multifunction display	N62/1	Radar sensors control unit
A2	Radio (with CODE 505 (Radio 20 NTG5 non-navigation-capable), with CODE 522 (Audio 20 radio))	N69/1	Left front door control unit
A7/3	Traction system hydraulic unit	N70	Overhead control panel control unit
A40/3	COMAND controller unit (with CODE 531 (COMAND APS))	N70s3	Interior lamp automatic function switch
A40/9	Audio/COMAND control panel	N70s6	Left front reading lamp switch
A40/13	Stereo multifunction camera (with CODE 23P (Driving assistance package))	N70s7	Right front reading lamp switch
A105	Touchpad (with CODE 531 (COMAND APS))	N73	Electronic ignition switch control unit
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N80	Steering column module control unit
B92	Front long-range radar sensor	N88	Tire pressure monitor control unit (with CODE 475 (Tire pressure monitor))
B92/1	Center rear bumper radar sensor	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
B92/3	Left front bumper radar sensor	N127	Powertrain control unit (model 166.063)
B92/4	Right front bumper radar sensor	N135	Steering wheel electronics
B92/7	Right outer rear bumper radar sensor	S4	Combination switch
B92/10	Left outer rear bumper radar sensor	S20	Driver-side power window and outside mirror adjustment switch group
M99	Steering wheel vibration motor	S40/4	Cruise control lever
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	S59	Steering column adjustment switch (with CODE 275 (Memory package))
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	S110	Left multifunction steering wheel button group
N10	SAM control unit	S111	Right multifunction steering wheel button group
N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))	Y3/8n4	Fully integrated transmission control control unit
N30/4	Electronic Stability Program control unit		

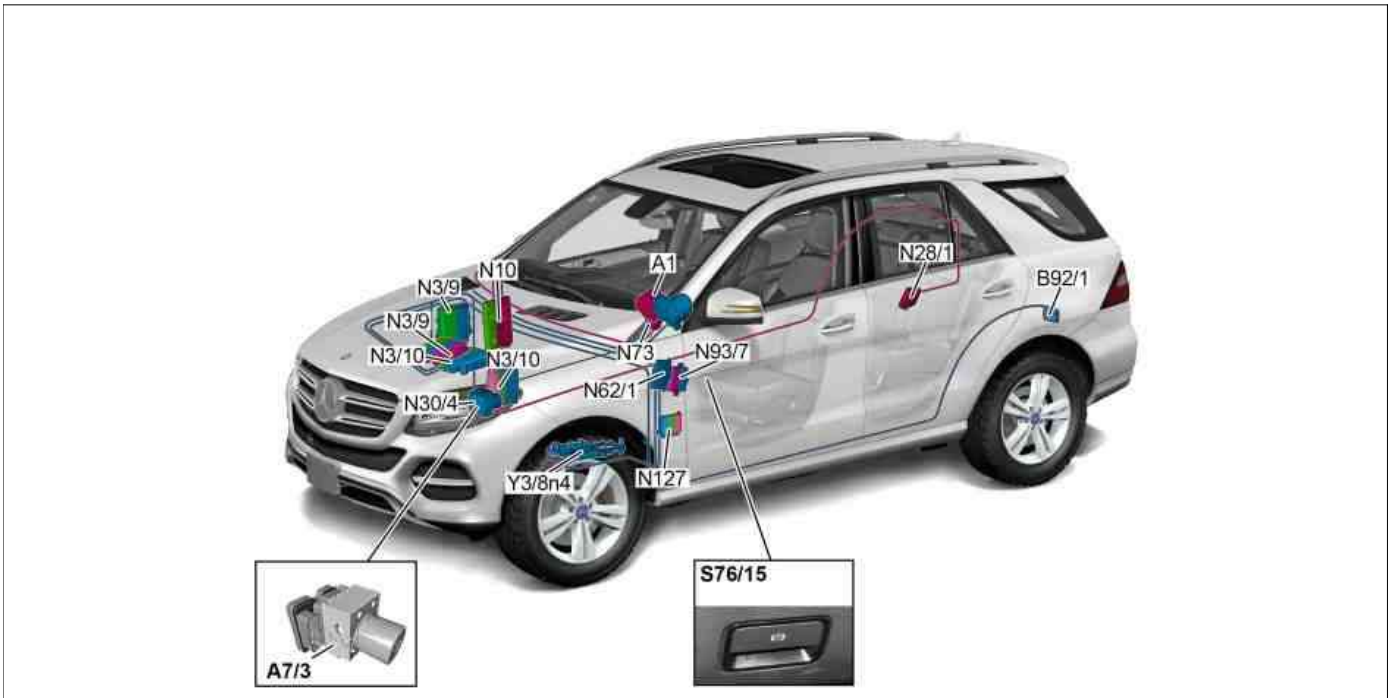

P30.30-2748-79

**Rear end PRE-SAFE (with CODE 253 (Rear-end collision warning and protection system))**


A1	Instrument cluster	N30/4	Electronic Stability Program control unit
A7/3	Traction system hydraulic unit	N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))
B92/1	Center rear bumper radar sensor	N73	Electronic ignition switch control unit
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	N127	Powertrain control unit (model 166.063)
N10	SAM control unit	S76/15	Electric parking brake switch
N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))	Y3/8n4	Fully integrated transmission control control unit

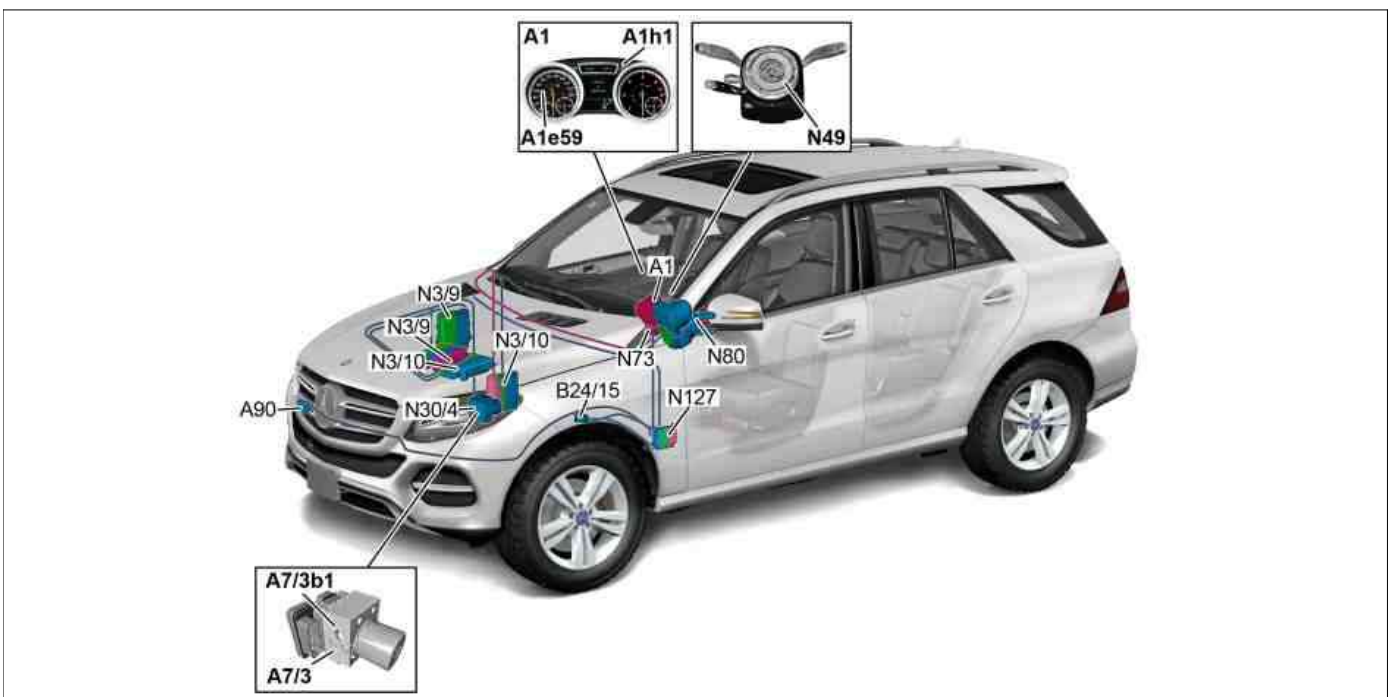

P30.30-2749-79

## COLLISION PREVENTION ASSIST (with CODE 258 (COLLISION PREVENTION ASSIST))

A1	Instrument cluster	N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)
A1h1	Warning buzzer	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A1e59	DISTRONIC warning lamp	N30/4	Electronic Stability Program control unit
A7/3	Traction system hydraulic unit	N49	Steering wheel angle sensor
A7/3b1	Front axle brake pressure sensor	N73	Electronic ignition switch control unit
A90	COLLISION PREVENTION ASSIST controller unit	N80	Steering column module control unit
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N127	Powertrain control unit (model 166.063)

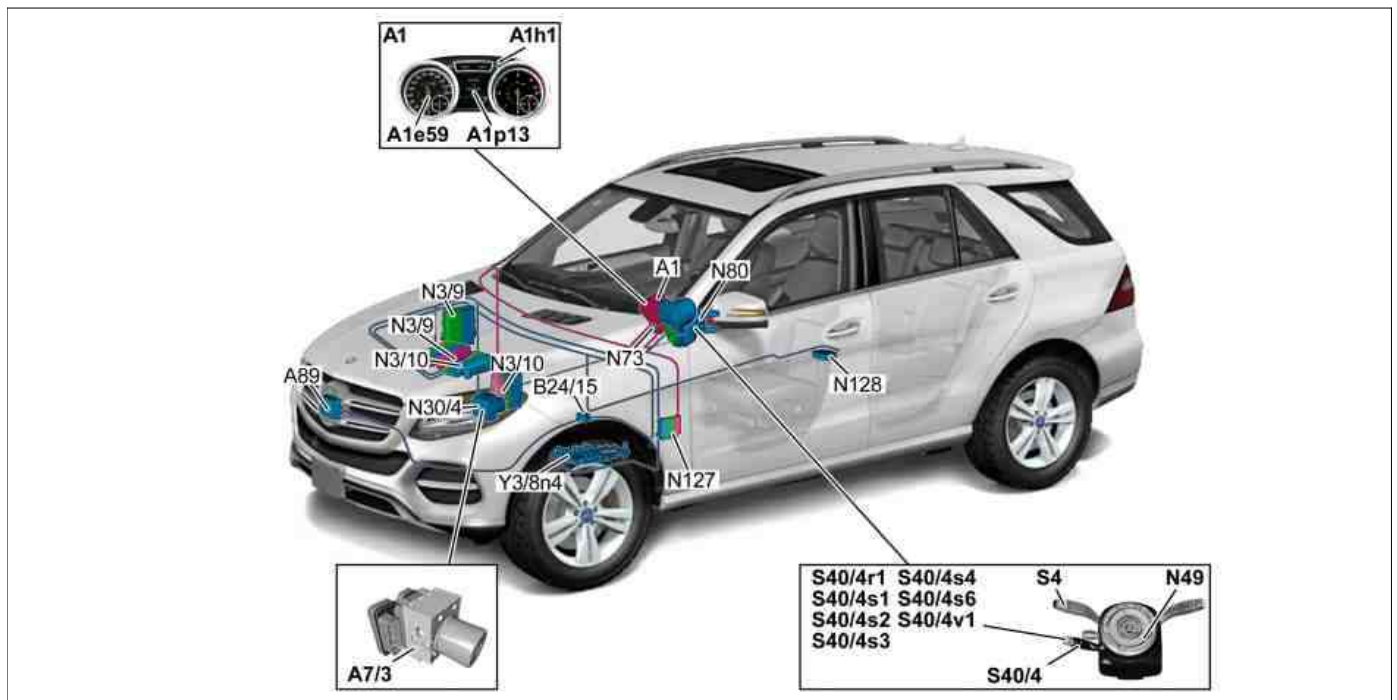


P30.30-2832-79

## DISTRONIC PLUS (with CODE 239 (DISTRONIC PLUS))

A1	Instrument cluster	N127	Powertrain control unit (model 166.063)
A1e59	DISTRONIC warning lamp	N128	Electric parking brake control unit
A1h1	Warning buzzer	S4	Combination switch
A1p13	Multifunction display	S40/4	Cruise control lever
A7/3	Traction system hydraulic unit	S40/4r1	DISTRONIC control
A89	DISTRONIC electric controller unit	S40/4s1	Resume from memory switch
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	S40/4s2	Decelerate and set switch
N3/9	CDI control unit (diesel engine)	S40/4s3	Accelerate and set switch
N3/10	ME-SFI [ME] control unit (gasoline engine)	S40/4s4	OFF switch
N30/4	Electronic Stability Program control unit	S40/4s6	SPEEDTRONIC switch (except code 460 (Canada version), except code 494 (USA version) and except code 498 (Japan version))
N49	Steering wheel angle sensor	S40/4v1	SPEEDTRONIC LED (except CODE 460 (Canada version) and except CODE 494 (USA version))
N73	Electronic ignition switch control unit	Y3/8n4	Fully integrated transmission control control unit
N80	Steering column module control unit		




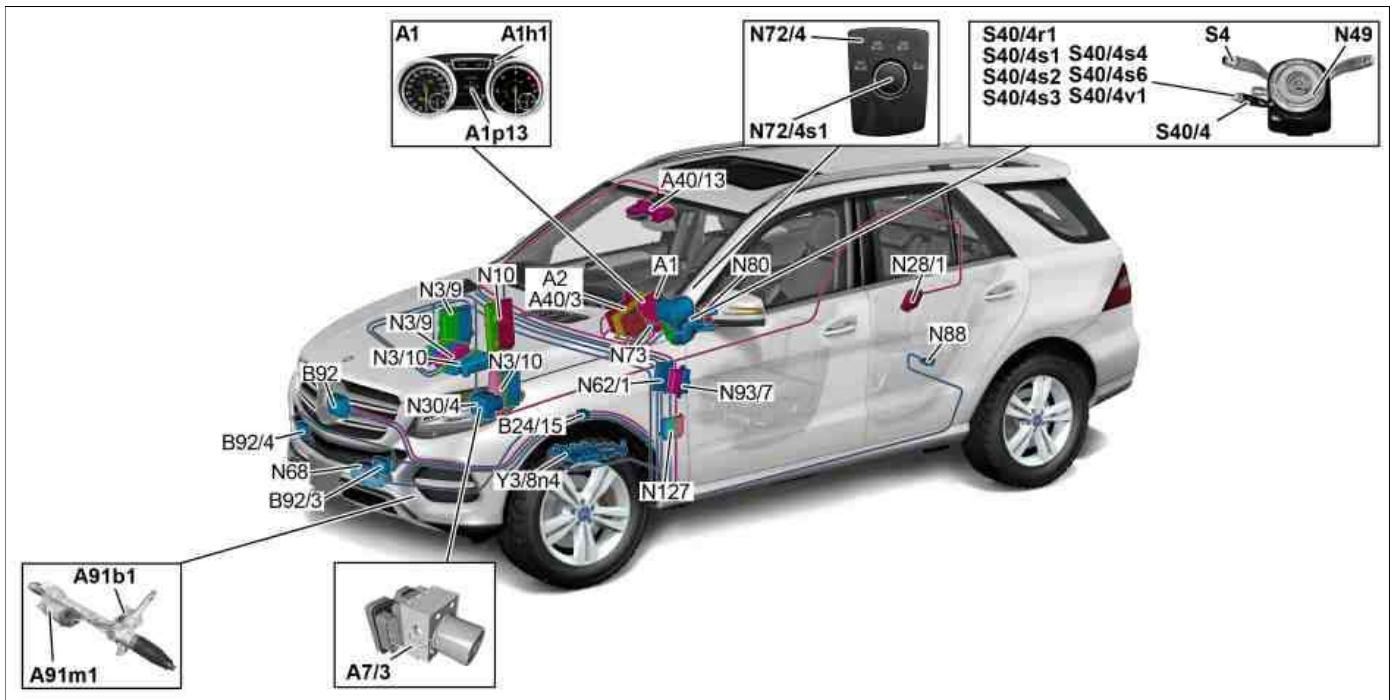

P30.30-2750-79

**DISTRONIC PLUS with Steer Assist function (with CODE 266 (DISTRONIC PLUS with Steer Assist and Stop & Go Pilot))**


A1	Instrument cluster	N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))
A1h1	Warning buzzer	N68	Electrical power steering control unit
A1p13	Multifunction display	N72/4	Transmission modes control panel
A2	Radio (with CODE 505 (Radio 20 NTG5 non-navigation-capable), with CODE 522 (Audio 20 radio))	N72/4s1	Transmission mode control
A7/3	Traction system hydraulic unit	N73	Electronic ignition switch control unit
A40/3	COMAND controller unit (with CODE 531 (COMAND APS))	N80	Steering column module control unit
A40/13	Stereo multifunction camera (with CODE 23P (Driving assistance package))	N88	Tire pressure monitor control unit (with CODE 475 (Tire pressure monitor))
A91b1	Electric power steering torque sensor	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
A91m1	Electric power steering actuator motor	N127	Powertrain control unit (model 166.063)
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	S4	Combination switch
B92	Front long-range radar sensor	S40/4	Cruise control lever
B92/3	Left front bumper radar sensor	S40/4r1	DISTRONIC control
B92/4	Right front bumper radar sensor	S40/4s1	Resume from memory switch
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)	S40/4s2	Decelerate and set switch
N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)	S40/4s3	Accelerate and set switch
N10	SAM control unit	S40/4s4	OFF switch
N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))	S40/4s6	SPEEDTRONIC switch (without code 494 (USA version))
N30/4	Electronic Stability Program control unit	S40/4v1	SPEEDTRONIC light-emitting diode (without code 494 (USA version))
N49	Steering wheel angle sensor	Y3/8n4	Fully integrated transmission control control unit

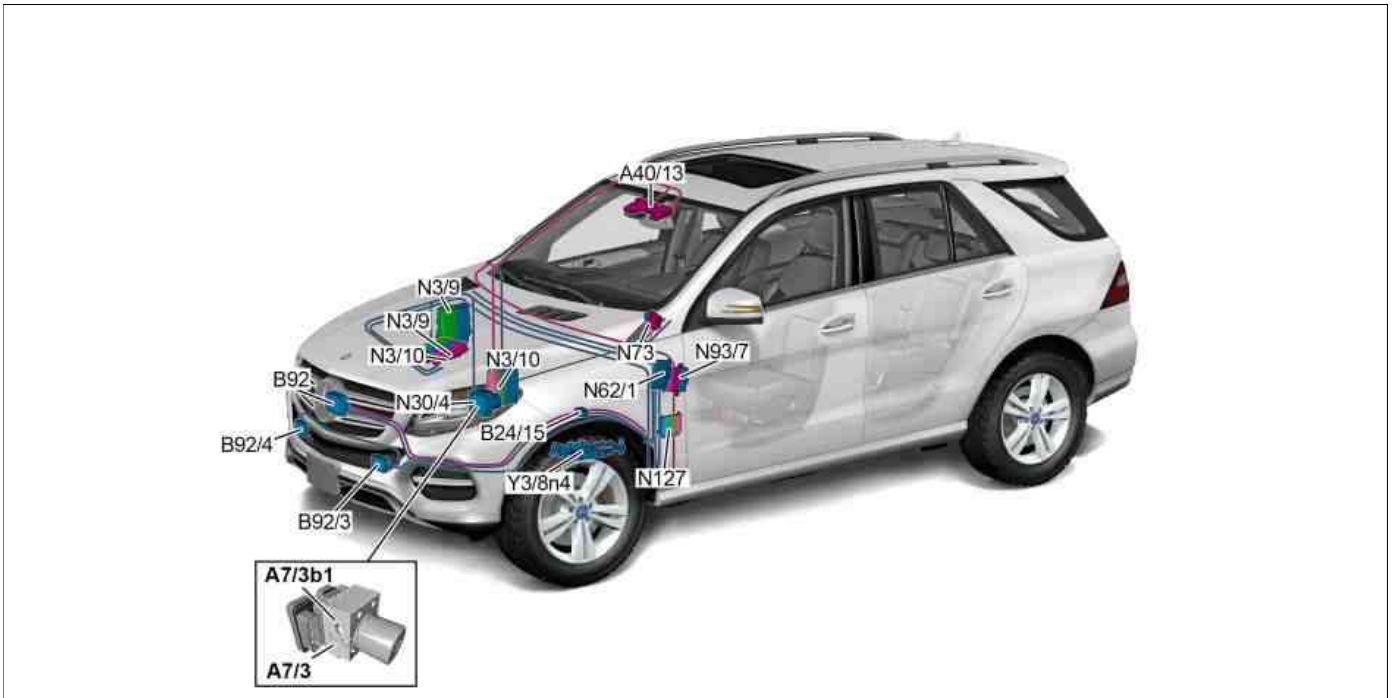

P30.30-2751-79


**BAS PLUS (with code 268 (Brake Assist PLUS) and code 269 (Brake Assist PLUS, cross-traffic (BAS+Q)))**

A7/3	Traction system hydraulic unit	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A7/3b1	Front axle brake pressure sensor	N30/4	Electronic Stability Program control unit
A40/13	Stereo multifunction camera (with CODE 23P (Driving assistance package))	N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N73	Electronic ignition switch control unit
B92	Front long-range radar sensor	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
B92/3	Left front bumper radar sensor	N127	Powertrain control unit (model 166.063)
B92/4	Right front bumper radar sensor	Y3/8n4	Fully integrated transmission control control unit
N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)		

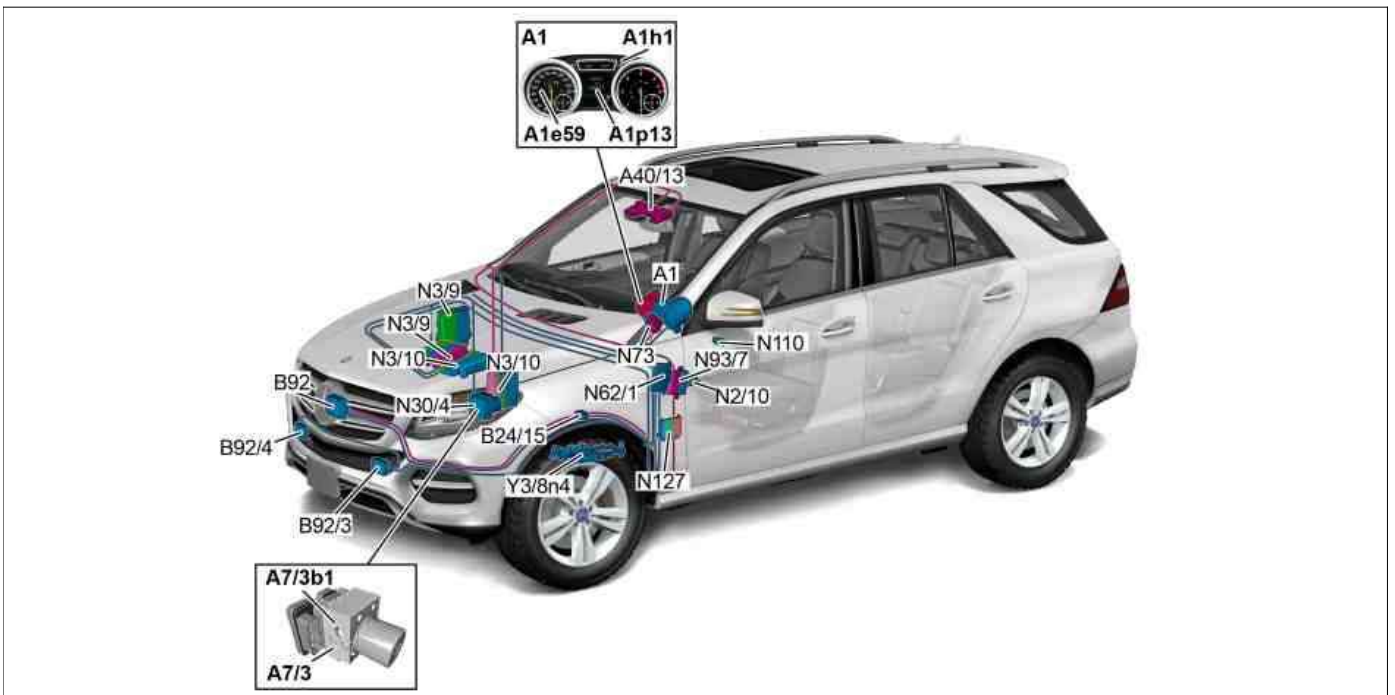

**PRE-SAFE brake (with code 271 (Autonomous brake intervention/pedestrian protection) and code 300 (PRE-SAFE® brake))**

A1	Instrument cluster	N2/10	Supplemental restraint system control unit
A1h1	Warning buzzer	N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)
A1e59	DISTRONIC warning lamp	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A1p13	Multifunction display	N30/4	Electronic Stability Program control unit
A7/3	Traction system hydraulic unit	N62/1	Radar sensors control unit (for code 23P (Drive Assistant Package))
A7/3b1	Front axle brake pressure sensor	N73	Electronic ignition switch control unit
A40/13	Stereo multifunction camera (with CODE 23P (Driving assistance package))	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N110	Weight sensing system (WSS) control unit (with CODE U10 (Automatic front passenger airbag shutoff))
B92	Front long-range radar sensor	N127	Powertrain control unit (model 166.063)
B92/3	Left front bumper radar sensor	Y3/8n4	Fully integrated transmission control control unit
B92/4	Right front bumper radar sensor		

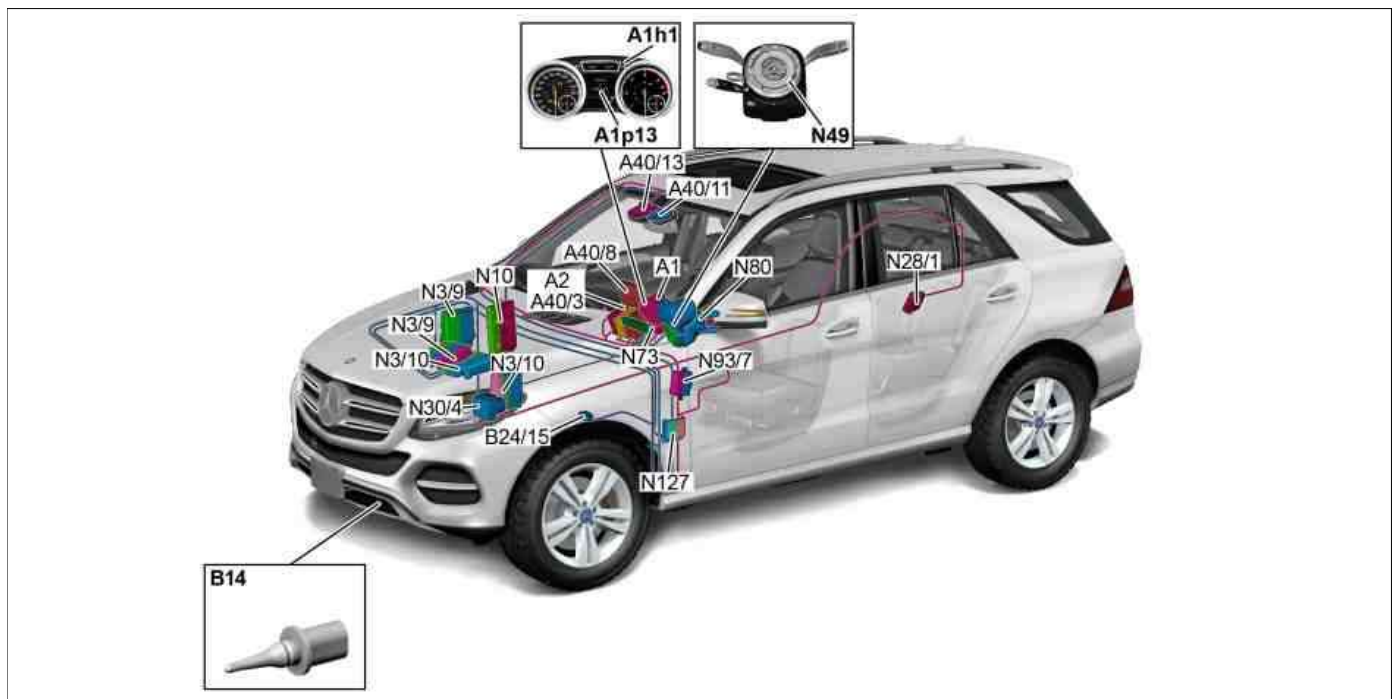

P54.33-3993-79

**Traffic Sign Assist (with code 513 (Traffic Sign Assist))**

A1	Instrument cluster	N3/9	CDI control unit (diesel engine: with engine 642 located on right; with engine 651 located at center)
A1h1	Warning buzzer	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 276,9 located at left, with engine 157, 276,8, 278 located at top center)
A1p13	Multifunction display	N10	SAM control unit
A2	Radio (with CODE 505 (Radio 20 NTG5 non-navigation-capable), with CODE 522 (Audio 20 radio))	N28/1	Trailer recognition control unit (with CODE 550 (Trailer hitch) (except model 166.063))
A40/3	COMAND controller unit (with CODE 531 (COMAND APS))	N30/4	Electronic Stability Program control unit
A40/8	Audio/COMAND display	N49	Steering wheel angle sensor
A40/11	Multifunction camera (with CODE 22P (Lane package))	N73	Electronic ignition switch control unit
A40/13	Stereo multifunction camera (with CODE 23P (Driving assistance package))	N80	Steering column module control unit
B14	Outside temperature sensor	N93/7	Chassis gateway control unit (with CODE 23P (Driving assistance package))
B24/15	Yaw rate sensor for lateral and longitudinal acceleration	N127	Powertrain control unit (model 166.063)

	Component description for instrument cluster	A1	GF54.30-P-6000GN
	Component description for the radio	Model 166 as of model year 2016 with code 505 (Radio 20 NTG5, not navigation-enabled) Model 166 as of model year 2016 with code 522 (Audio 20 radio) Model 292 with code 505 (Radio 20 NTG5, not navigation-enabled) Model 292 with code 522 (Audio 20 radio) A2	GF82.60-P-3122GN
	Component description for COMAND controller unit	Model 166 as of model year 2016 with code 531 (COMAND APS) Model 292 with code 531 (COMAND APS) A40/3	GF82.85-P-3136GN
	Component description for Audio/COMAND display	A40/8	GF54.30-P-6150GN
	Component description for Audio/COMAND control panel	A40/9	GF54.21-P-4501GN
	Component description for multifunction camera	Model 166 as of model year 2016 with code 22P (Lane tracking package) Model 166 as of model year 2016 with code 23P (Driving Assistance package) Model 166 as of model year 2016 with code 513 (Traffic Sign Assist) Model 166 as of model year 2016 with code 640 (High-performance LED) Model 166 as of model year 2016 with code 641 (Dynamic LED headlamps, left-hand traffic) Model 166 as of model year 2016 with code 642 (Dynamic LED headlamps, right-hand traffic) Model 292 with code 22P (Lane tracking package) Model 292 with code 23P (Driving Assistance package) Model 292 with code 513 (Traffic Sign Assist) Model 292 with code 640 (High-performance LED) Model 292 with code 641 (Dynamic LED headlamps, left-hand traffic) Model 292 with code 642 (Dynamic LED headlamps, right-hand traffic) A40/11, A40/13	GF54.21-P-3300GN
	Component description for DISTRONIC electric controller unit	Model 166 as of model year 2016 with code 239 (DISTRONIC PLUS) Model 292 as of model year 2016 with code 239 (DISTRONIC PLUS) A89	GF30.30-P-3213GN
	COLLISION PREVENTION ASSIST controller unit, component description	Model 166 as of model year 2016 with code 258 (COLLISION PREVENTION ASSIST) Model 292 with code 258 (COLLISION PREVENTION ASSIST) A90	GF30.30-P-3214GN



	Touchpad, component description	Model 166 as of model year 2016 with code 531 (COMAND APS) Model 292 with code 531 (COMAND APS) A105	GF54.21-P-4511GN
	Turn rate, lateral and longitudinal acceleration sensor, component description	B24/15	GF42.45-P-4082GN
	Rain/light sensor with additional functions, component description	B38/2	GF54.21-P-6005GN
	Long-range radar sensor, component description	Model 166 as of model year 2016 with code 23P (Driving Assistance package) Model 292 with code 23P (Driving Assistance package) B92	GF30.30-P-3125GN
	Component description for bumper radar sensors	Model 166 as of model year 2016 with code 22P (Lane tracking package) Model 166 as of model year 2016 with code 23P (Driving Assistance package) Model 292 with code 22P (Lane tracking package) Model 292 with code 23P (Driving Assistance package) B92/1, B92/3, B92/4, B92/6, B92/7, B92/10, B92/11	GF30.30-P-3302GN
	Supplemental restraint system control unit, component description	N2/10	GF91.60-P-4080GN
	Component description for CDI control unit	Model 166 with engine 642.8 as of model year 2016 Model 292 with engine 642 N3/9 Model 166 with engine 651.9 as of 6/1/15 as of model year 2016 N3/9	GF07.16-P-6000OGF GF07.16-P-6000OLF
	Component description for ME-SFI (ME) control unit	Model 166 (except 166.063) with engine 276.8 as of model year 2016 Model 292 with engine 276.8 N3/10 Model 166.063 with engine 276.8 as of model year 2016 N3/10 Model 166 with engine 157.9, 278.9 as of model year 2016 Model 292 with engine 157.9, 278.9 N3/10 Model 166 with engine 276.9 as of model year 2016 N3/10	GF07.61-P-6000MMX GF07.61-P-6000MMM GF07.61-P-6000MMY GF07.61-P-6000MNG
	SAM control unit, component description	N10	GF54.21-P-4157GN
	Component description for trailer recognition control unit	Model 166 as of model year 2016 with code 550 (Trailer coupling) Model 292 with code 550 (Trailer coupling) N28/1	GF31.19-P-4050GN
	Component description for Electronic Stability Program control unit	Model 166.063 as of model year 2016 N30/4 Model 166 (except 166.063) as of model year 2016 Model 292 N30/4	GF42.45-P-5119GRH GF42.45-P-5119GN
	Component description for radar sensors control unit	Model 166 as of model year 2016 with code 23P (Driving Assistance package) Model 292 with code 23P (Driving Assistance package) N62/1	GF30.30-P-3301GN
	Electrical power steering control unit (ES), component description	N68	GF46.35-P-7010GN
	Component description for left front door control unit	N69/1	GF72.29-P-6001GN
	Component description for right front door control unit	N69/2	GF72.29-P-6009GN
	Component description for overhead control panel control unit	N70	GF82.20-P-5216GN
	Lower control panel control unit, component description	N72/4	GF54.21-P-6060GN

	Component description for the electronic ignition lock control unit	N73	GF80.57-P-6001GN
	Component description for steering column tube module control unit	N80	GF54.21-P-6051GN
	Component description for tire pressure monitor control unit	Model 166 as of model year 2016 with code 475 (Tyre pressure monitoring system) Model 292 with code 475 (Tyre pressure monitoring system) N88	GF40.15-P-5124GN
	Component description for chassis gateway control unit	Model 166 as of model year 2016 with code 23P (Driving Assistance package) Model 292 with code 23P (Driving Assistance package) N93/7	GF54.21-P-1010GN
	Component description for Weight Sensing System (WSS) control unit	Model 166 as of model year 2016 with code U10 (Automatic seat occupancy recognition and child seat recognition) Model 292 with code U10 (Automatic seat occupancy recognition and child seat recognition) N110	GF91.60-P-4069GN
	Drivetrain control unit, component description	Model 166.063 with engine 276.8 as of model year 2016 N127	GF54.21-P-2141GN
	Electric parking brake control unit, component description	N128	GF42.20-P-5005GN
	Component description for fully integrated transmission control unit	Model 166 with transmission 725.0 as of model year 2016 Y38n4 Model 292 with transmission 725.0 Y38n4 Model 166 with transmission 724.204 as of model year 2016 Y38n4	GF27.60-P-5165ANF  GF27.60-P-5165ANJ  GF27.60-P-5165GRH
	Table of contents for function description of driver assistance systems		GF54.00-P-0998GN