

Item	Designation	Coordinates
<u>A0</u>	Color code key	23L
<u>B6/5</u>	Right intake camshaft Hall sensor	16L
<u>B6/7</u>	Right exhaust camshaft Hall sensor	18L
<u>B11/4</u>	Coolant temperature sensor	15L
<u>G3/3</u>	Left oxygen sensor upstream of catalytic converter	12L
<u>G3/3x1</u>	Electrical connector for left oxygen sensor upstream of catalytic converter	11J
<u>G3/4</u>	Right oxygen sensor upstream of catalytic converter	2L
<u>G3/4x1</u>	Electrical connector for right oxygen sensor upstream of catalytic converter	1J
<u>G3/5</u>	Left oxygen sensor downstream of catalytic converter	9L
<u>G3/5x1</u>	Electrical connector for left oxygen sensor downstream of catalytic converter	8J
<u>G3/6</u>	Right oxygen sensor downstream of catalytic converter	7L
<u>G3/6x1</u>	Electrical connector for right oxygen sensor downstream of catalytic converter	6J
<u>N3/10</u>	ME-SFI [ME] control unit	4A 12A 20A
<u>R48</u>	Coolant thermostat heating element	14L
<u>Y49/5</u>	Right intake camshaft solenoid	19L
<u>Y49/7</u>	Right exhaust camshaft solenoid	20L
<u>Y77/1</u>	Boost pressure positioner	5L
<u>Y130</u>	Engine oil pump valve	4L
<u>Z7/36z1</u>	Circuit 87 M2e connector sleeve	11G
<u>Z7/36z2</u>	Circuit 87 M2e connector sleeve	4G 11E
<u>Z7/38z1</u>	Circuit 87 M1i connector sleeve	18G
<u>Z7/43z1</u>	Sensor ground line connector sleeve	8E 17E