


Model 118, 177, 247

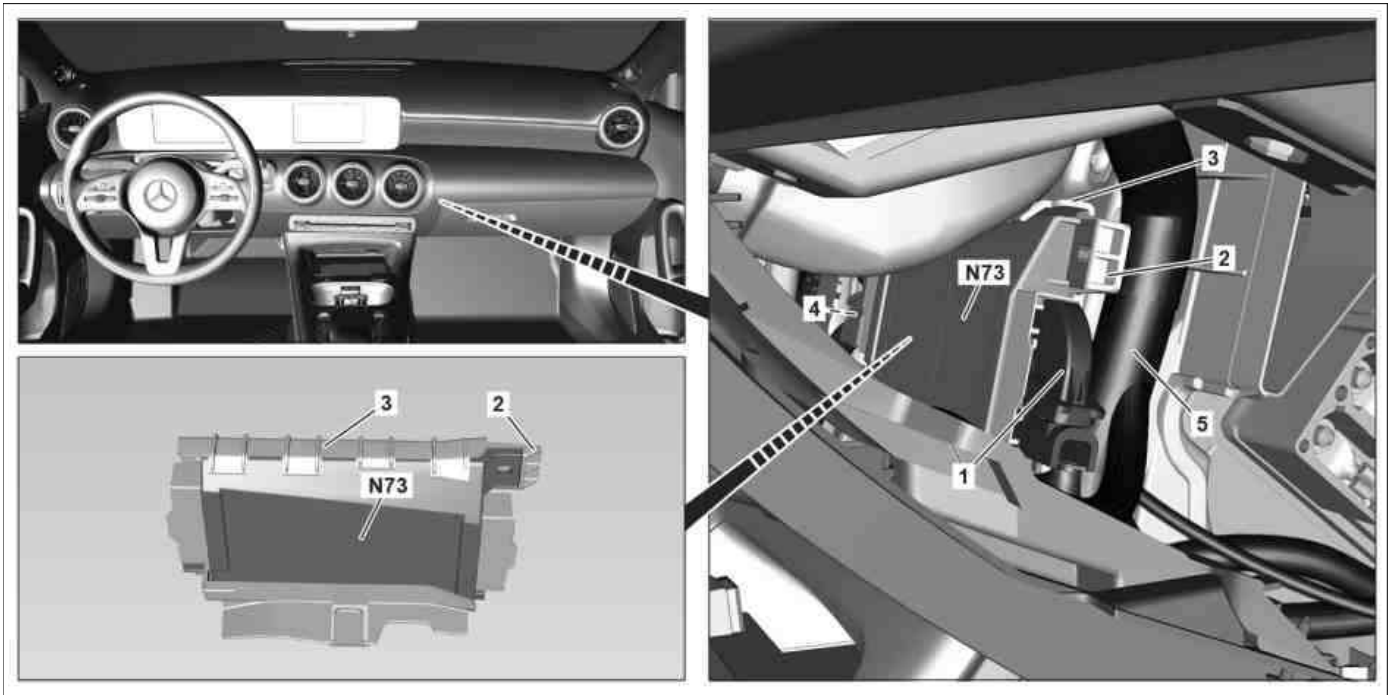

P54.21-3918-09

1 Electrical connector
2 Retaining lug
3 Bracket

4 Electrical connector
5 Electrical subharness
N73 Electronic ignition switch control unit

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1 AD	Commission electronic ignition lock control unit (N73).	When replacing the electronic ignition lock control unit (N73).	AD00.00-P-2000-06MFA
2	Disconnect the ground line for the on-board electrical system battery (G1).		AR54.10-P-0003MFA
3	Remove glove box.		AR68.10-P-1400MFA
4	Release electrical connector (1) and disconnect.		
5	Slide electrical subharness (5) as far as possible out of the working area.	 Do not crush or kink or subject electric lines to tension. This will result in damage to the lines which may impair their functional capability.	
6	Push retaining lug (2) and pull electronic ignition lock control unit (N73) far enough out of holder (3) to gain access to the electrical connector (4).	 Do not crush or kink or subject electric lines to tension. This will result in damage to the lines which may impair their functional capability.	
7	Release and disconnect electrical connector (4) then remove electronic ignition lock control unit (N73).		
8	Install in the reverse order.		