


Model 118, 177, 247

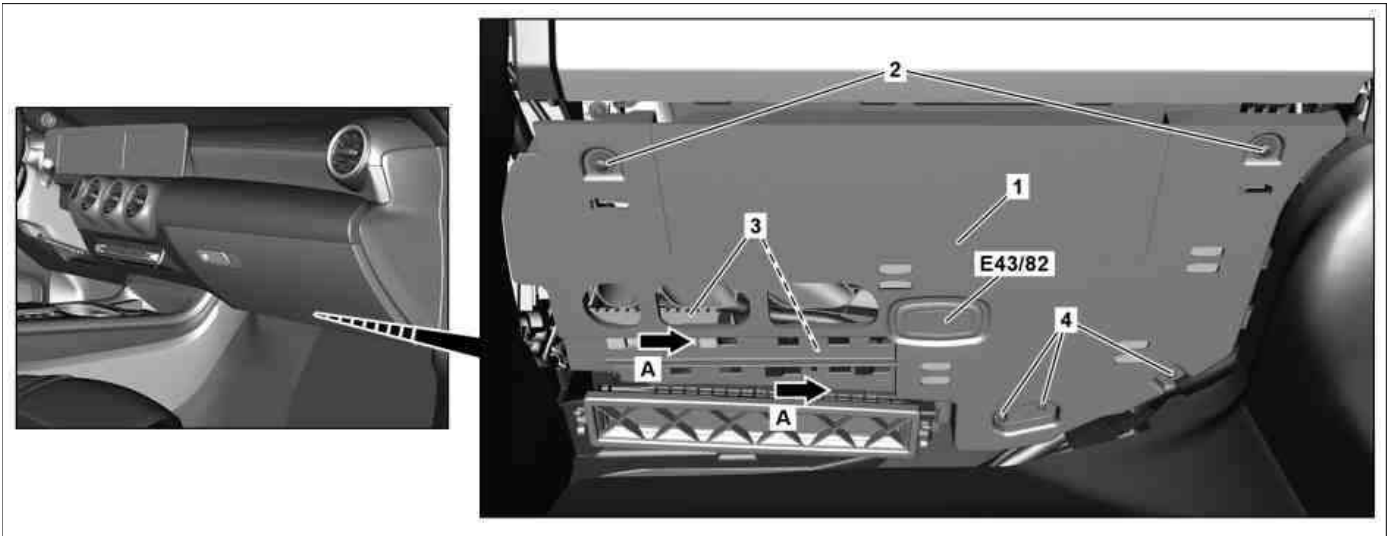


P68.10-5792-08

1 Footwell trim
2 Bolts
3 Potential distributor

4 Retaining clips
E43/82 Right front footwell ambient illumination

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Move front passenger seat into the rearmost position.		
2	Switch off ignition and store transmitter key outside of transmitter range (min. 2 m).		
3	Remove screw/bolts (2) .		
4	Unclip front right footwell ambient lighting (E43/82) and release and disconnect electrical connector.		
5	Carefully pull footwell trim (1) toward the rear and lower as far as possible.		
6	Remove potential distributors (3) in the direction of the arrow (arrows A) from the footwell trim (1).		
7	Unclip retaining clips (4) from footwell trim (1) and remove footwell trim (1).	Dismantling tool	*000589956300
8	Install in the reverse order.		

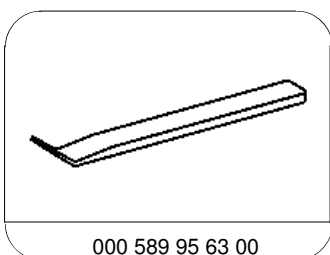

000 589 95 63 00

Dismantling tool