

- Checking the tire pressure electronically
(> page 408)
- Calling up the service due date
(> page 371)

Settings menu

Introduction



In the **Sett.** menu, you have the following options:

- Changing the instrument cluster settings
(> page 277)
- Changing the light settings (> page 277)
- Changing the vehicle settings
(> page 279)
- Changing the convenience settings
(> page 279)
- Restoring the factory settings
(> page 281)

Instrument cluster submenu

Selecting the unit of measurement for distance

The **Display Unit Speed-/Odometer** function allows you to choose whether certain displays appear in kilometers or miles in the multifunction display.

- ▶ Press the **◀** or **▶** button on the steering wheel to select the **Settings** menu.
- ▶ Press the **▼** or **▲** button to select the **Instrument Cluster** submenu.
- ▶ Press **OK** to confirm.

- ▶ Press the **▼** or **▲** button to select the **Display Unit Speed-/Odometer** function.

You will see the selected setting: **km** or **miles**.

- ▶ Press the **OK** button to save the setting.

The selected unit of measurement for distance applies to:

- Digital speedometer in the **Trip** menu
- Odometer and the trip odometer
- Trip computer
- Current consumption and the range
- Navigation messages in the **Navi** menu
- Cruise control
- DISTROニック PLUS
- ASSYST PLUS service interval display

Selecting the permanent display function

You can determine whether the multifunction display permanently shows your speed or the outside temperature.

- ▶ Press the **◀** or **▶** button on the steering wheel to select the **Sett** menu.
- ▶ Press the **▼** or **▲** button to select the **Instrument Cluster** submenu.
- ▶ Press **OK** to confirm.
- ▶ Press the **▼** or **▲** button to select the **Permanent Display**: function.

You will see the selected setting **Outside Temperature** or **Speedometer [mph]/Speedometer [km/h]**.

- ▶ Press the **OK** button to save the setting.

- i** The speed is highlighted in km/h or in mph conversely to your speedometer.

Light submenu

Setting the daytime running lamps

- i** This function is not available in Canada.

- ▶ Press the **◀** or **▶** button on the steering wheel to select the **Sett.** menu.
- ▶ Press the **▼** or **▲** button to select the **Light** submenu.