

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Chassis checks										
Visually check brake system components, lines, hoses, calipers	•	•	•	•	•	•	•	•	•	•
Check thickness of brake pads and disks, front and rear wheels removed	•	•	•	•	•	•	•	•	•	•
Chassis and load-bearing body components: Check for damage and corrosion	•	•	•	•	•	•	•	•	•	•

Service at 130,000 miles or 13 years

Required Service Work

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Engine – oil and filter change	•	•	•	•	•	•	•	•	•	•
Check catch, safety catch and hinges on engine hood for proper operation	•	•	•	•	•	•	•	•	•	•
Clean visible area of water deflector	•			•	•	•	•	•	•	
Check water drain in air/water duct for obstructions; clean if soiled			•							
Fill up DEF (engine 642, 651)					•	•	•	•		
Reset maintenance service indicator in instrument cluster	•	•	•	•	•	•	•	•	•	•
Check starter using STAR DIAGNOSIS tester (E 400 HYBRID only)					•					
Replace dust filter						•		•		
Check thickness of brake pads, front and rear	•	•	•	•	•	•	•	•	•	•
Correct tire inflation pressure	•	•	•	•	•	•	•	•	•	•
Correct inflation pressure in spare tire (where applicable)	•	•	•	•	•	•	•	•	•	•

 **WARNING**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Replace air filter (engine 133)		•								
Check the following fluid levels; correct if necessary										
If there is a loss of fluid, determine cause and perform repair with separate work order										
Check coolant level	•	•	•	•	•	•	•	•	•	•
Brake system	•	•	•	•	•	•	•	•	•	•
Power steering (where applicable)	•		•		•		•			•
Windshield washer system	•	•	•	•	•	•	•	•	•	•
Active Body Control (ABC) (if applicable)			•						•	

Recommended Service Work

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Replace wiper blades	•	•	•	•	•	•	•	•	•	•
Replace combination filter	•	•		•	•	•	•	•	•	•
Electrical system checks										
Horn, high beam flasher, hazard warning lamps, turn signals	•	•	•	•	•	•	•	•	•	•
Warning/indicator lamps, illumination and interior lighting/exterior lighting	•	•	•	•	•	•	•	•	•	•
Check trunk/cargo compartment lighting	•	•	•	•	•	•	•	•	•	•
Check condition of battery (main/starter/auxiliary) using "Midtronics EXP 717" tester	•	•	•	•	•	•	•	•	•	•
Visual and functional checks										
Check windshield washer and headlamp cleaning system	•	•	•	•	•	•	•	•	•	•
Clean and lubricate soft top seals					•					

 **WARNING**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Tire checks										
Tire rotation (where applicable)	•	•	•	•	•	•	•	•	•	•
Inspect tires for damage, measure tread depth	•	•	•	•	•	•	•	•	•	•
Check TIREFIT sealant expiration date (where applicable)	•	•	•	•	•	•	•	•	•	•
Activate Tire Pressure Monitoring System	•	•	•	•	•	•	•	•	•	•
Chassis checks										
Visually check brake system components, lines, hoses, calipers	•	•	•	•	•	•	•	•	•	•
Check thickness of brake pads and disks, front and rear wheels removed	•	•	•	•	•	•	•	•	•	•

Service at 140,000 miles or 14 years

Required Service Work

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Engine – oil and filter change	•	•	•	•	•	•	•	•	•	•
Check catch, safety catch and hinges on engine hood for proper operation	•	•	•	•	•	•	•	•	•	•
Check condition of poly-V-belt	•	•	•	•	•	•	•	•	•	•
Clean visible area of water deflector	•			•	•	•	•		•	
Check water drain in air/water duct for obstructions; clean if soiled			•							
Fill up DEF (engine 642, 651)					•	•	•	•		
Reset maintenance service indicator in instrument cluster	•	•	•	•	•	•	•	•	•	•

 **WARNING**

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Check starter using STAR DIAGNOSIS tester (E 400 HYBRID only)					•					
Automatic transmission – oil and filter change, except for E 400 HYBRID (engine 152, 271, 276, 278, 279, 642, 651)	•		•	•	•	•	•	•	•	•
Automatic transmission – oil and filter change (engine 157)						•		•		
Replace brake fluid	•	•	•	•	•	•	•	•	•	•
Replace combination filter and/or dust filter (where applicable)	•	•	•	•	•	•	•	•	•	•
Check thickness of brake pads, front and rear	•	•	•	•	•	•	•	•	•	•
Correct tire inflation pressure	•	•	•	•	•	•	•	•	•	•
Correct inflation pressure in spare tire (where applicable)	•	•	•	•	•	•	•	•	•	•
Leakage – Major components: Check for chafe marks, line routing, damaged components. In the event of leakage, determine cause and perform repair with separate work order	•	•	•	•	•	•	•	•	•	•
Check DEF lines and components for leaks and damage (engine 642, 651)					•	•	•	•		
Visually inspect condition of front axle ball joints, rubber boots	•	•	•	•	•	•	•	•	•	•
Visually inspect condition of rear axle ball joints, rubber boots						•		•		
Visually inspect condition of driveshaft flexible disks	•		•	•	•	•	•	•	•	•
Visually inspect condition of steering mechanical components, rubber boots	•	•	•	•	•	•	•	•	•	•
Replace air filter (engine 133)		•								



WARNING

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Check the following fluid levels; correct if necessary										
If there is a loss of fluid, determine cause and perform repair with separate work order										
Engine cooling system, antifreeze and corrosion protection (engine 275, main circuit)			•							
Check coolant level	•	•	•	•	•	•	•	•	•	•
Brake system	•	•	•	•	•	•	•	•	•	•
Power steering (where applicable)	•		•		•		•			•
Windshield washer system	•	•	•	•	•	•	•	•	•	•
Active Body Control (ABC) (if applicable)			•						•	
Function check										
Check parking brake (function test only)	•	•	•	•	•	•	•	•	•	•
Trailer hitch: Check condition and functionality						•		•		

Recommended Service Work

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Replace wiper blades	•	•	•	•	•	•	•	•	•	•
Electrical system checks										
Horn, high beam flasher, hazard warning lamps, turn signals	•	•	•	•	•	•	•	•	•	•
Warning/indicator lamps, illumination and interior lighting/ exterior lighting	•	•	•	•	•	•	•	•	•	•
Check trunk/cargo compartment lighting	•	•	•	•	•	•	•	•	•	•
Check and correct headlamp setting	•	•	•	•	•	•	•	•	•	•

⚠ WARNING

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.

	C-Class	CLA-Class	CL-Class	CLS-Class	E-Class	GL-Class	GLK-Class	M-Class	SL-Class	SLK-Class
Check condition of battery (main/starter/auxiliary) using "Midtronics EXP 717" tester	•	•	•	•	•	•	•	•	•	•
Visual and functional checks										
Check seat belts and buckles for signs of external damage and proper function	•	•	•	•	•	•	•	•	•	•
Check windshield washer and headlamp cleaning system	•	•	•	•	•	•	•	•	•	•
Check, clean and lubricate sliding sunroof mechanism (where applicable)	•		•	•	•		•			
Check, clean and lubricate mechanism of panorama roof with power tilt/sliding panel (where applicable)	•	•			•	•	•			
Clean and lubricate soft top seals					•					
Check bodywork for paint work damage	•	•	•	•	•	•	•	•	•	•
Tire checks										
Tire rotation (where applicable)	•	•	•	•	•	•	•	•	•	•
Inspect tires for damage, measure tread depth	•	•	•	•	•	•	•	•	•	•
Check TIREFIT sealant expiration date (where applicable)	•	•	•	•	•	•	•	•	•	•
Activate Tire Pressure Monitoring System	•	•	•	•	•	•	•	•	•	•
Chassis checks										
Visually check brake system components, lines, hoses, calipers	•	•	•	•	•	•	•	•	•	•
Check thickness of brake pads and disks, front and rear wheels removed	•	•	•	•	•	•	•	•	•	•
Chassis and load-bearing body components: Check for damage and corrosion	•	•	•	•	•	•	•	•	•	•



WARNING

Please make sure you read the technical documentation, such as the Operator's Manual and workshop information, before carrying out any maintenance work.