


MODEL 166

 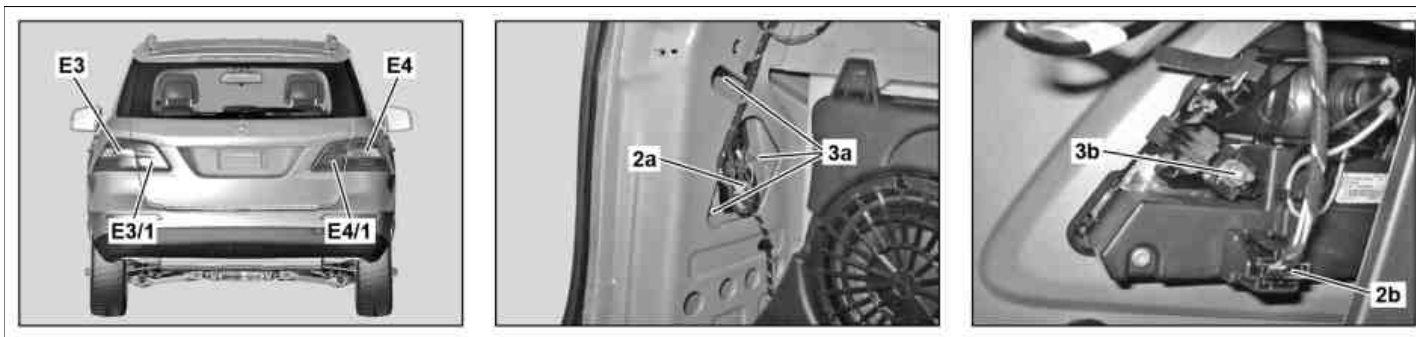


P82.10-6988-07

Shown on model 166.004

2a Electrical connector
 2b Electrical connector
 3a Nut
 3b Nut

E3 Left rear lamp unit
 E3/1 Inner left rear lamp unit
 E4 Right rear lamp unit
 E4/1 Inner right rear lamp unit

	Remove/install		
1	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit		
2.1	Detach side panel in trunk in upper area	MODEL 166.0	AR68.30-P-4800GQ
2.2	Remove cover in side paneling in trunk	MODEL 166.8	AR68.30-P-4800GQX
3	Release and disconnect electrical connector (2a)	When removing left rear lamp unit (E3) or right rear lamp unit (E4)	
4	Unscrew nuts (3a)	When removing left rear lamp unit (E3) or right rear lamp unit (E4)	
5	Remove left rear lamp unit (E3) or right rear lamp unit (E4) from rear fender		
6	Remove center door lining at rear-end door	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1)	AR72.20-P-3520GQ
7	Release and detach electrical connector (2b)	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1)	
8	Loosen nut (3b)	When removing inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1)	
9	Remove inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1) from rear-end door		
10	Install in the reverse order		