


MODELS 251

2nd seat row

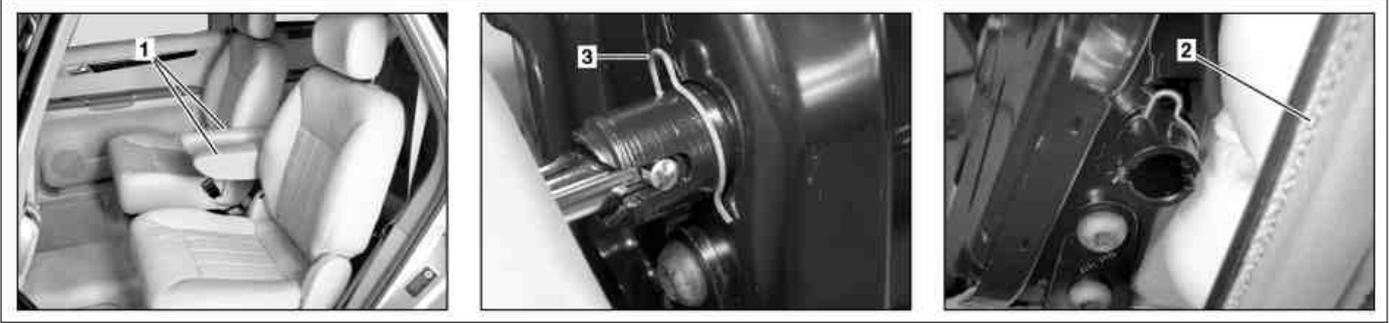

P91.12-2816-07

Cover partially removed for better view

1 Armrest

2 Seat cover

3 Spring

	Remove		
1	Remove paneling of rear seat backrest	Left or right	AR91.12-P-1131RT
2	Pull cover (2) forwards out of the working area	To guarantee access to the spring (3). Do not pull too far, as this could damage the cover!	
3	Detach spring (3)		
4	Detach armrest (1)		
	Install		
5	Detach plastic pivot bearing from the armrest (1) and insert in rear seat backrest	Note the installation position of the plastic pivot bearing.	
6	Insert spring (3) in plastic pivot bearing		
7	Install paneling of rear seat backrest		AR91.12-P-1131RT
8	Press in armrest (1)		
9	Perform a function test		