


## ENGINE 113.971 in MODEL 251.075 /175

- 1 Partition wall
- 2 Air filter housing
- 3 Intake air duct
- 4 Engine cover
- 5 Supports
- 6 Supports

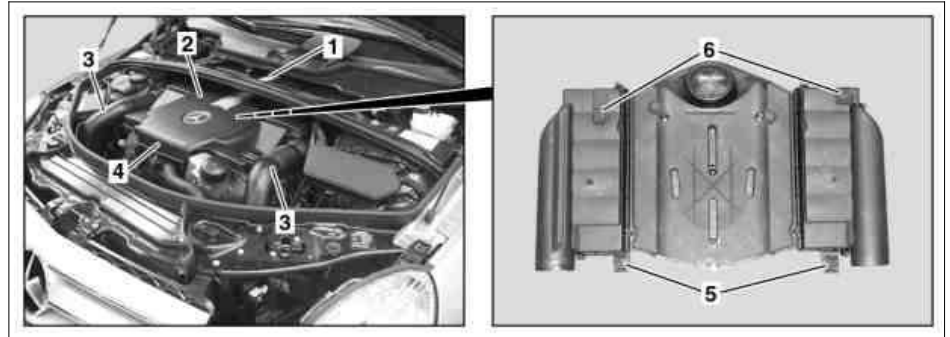

P09.10-2165-04

☒ ☒	Remove/install		
⚠ <b>Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being jammed or pinched</b> when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood		AR88.40-P-1000RT
2	Remove engine trim panel (4)		AR01.10-P-2405RT
3	Remove the left and the right intake air duct (3)		
4	Remove partition (1)		AR62.30-P-2400RT
5	Detach the air filter housing (2) from the mounts (5, 6) at the left and right cylinder head cover from above	ⓘ In order to avoid scratches and damage, the air filter housing (2) must be put down on a padded base.	
6	Install in the reverse order		