

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<u>F4</u>	Load compartment fuse and relay box	12A 26A
<u>F4f44</u>	Fuse 44	12A
<u>F4f45</u>	Fuse 45	9A
<u>F4f46</u>	Fuse 46	25A
<u>F33</u>	Battery compartment prefuse box	3L 22L
<u>F33f79</u>	Fuse 79	1K
<u>F33f85</u>	Fuse 85	20K
<u>N10</u>	Front SAM control unit	34L
<u>N10/8</u>	Rear SAM control unit	4A
<u>N24/3</u>	DC/AC converter control unit (115V socket)	17L
<u>R3</u>	Front cigar lighter (with ashtray illumination)	26L
<u>R3e1</u>	Illumination	26L
<u>R3r1</u>	Heating element	25L
<u>U1</u>	Valid for USA	11D
<u>U656</u>	Valid for interior light package	28H
<u>U925</u>	Valid for 115V socket	13D
<u>W7</u>	Ground (right wheelhouse in luggage compartment)	2E 8H
<u>W17</u>	Ground (right rear seat)	20L 32E
<u>W17/1</u>	Ground (left rear seat)	9H
<u>W29/2</u>	Ground (right A-pillar)	11H
<u>X18</u>	Interior/cockpit connector	12E
<u>X29/6</u>	Center console intermediate connector	24E
<u>X30/6</u>	Cockpit voltage distributor (CAN) connector	6L
<u>X58/4</u>	Load compartment socket	8L
<u>X58/17</u>	Front interior socket	11L
<u>X58/20</u>	Right 2nd seat row socket	10L
<u>X58/34</u>	115 V socket	14L
<u>Z61/4</u>	Front center console circuit 31 connector sleeve	29L
<u>Z81/8</u>	Front center console circuit 58d connector sleeve	30L
<u>Z204</u>	Wake-up signal/circuit 58d voltage distributor connector	32L
<u>Z204/3</u>	Circuit 31 right rear seat voltage distributor connector	31A