

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<u>A1</u>	Instrument cluster	9J
<u>A9/1</u>	AIRMATIC compressor unit	2C
<u>B22/7</u>	Left rear level sensor	5G
<u>B22/10</u>	Right rear level sensor	5H
<u>F58kG</u>	Air suspension compressor	2E
<u>N3/9</u>	CDI control unit	13H
<u>N3/10</u>	ME-SFI [ME] control unit	15H
<u>N10</u>	Front SAM control unit	17A
<u>N10/8</u>	Rear SAM control unit	21A
<u>N22</u>	AAC [KLA] control and operating unit	22J
<u>N22/7</u>	Comfort AAC [KLA] control and operating unit	22J
<u>N47-5</u>	ESP control unit	9A
<u>N49</u>	Steering angle sensor	15B
<u>N51</u>	AIRMATIC with ADS control unit	9E
<u>N80</u>	Steering column module	12B
<u>N93</u>	Central gateway control unit	22E
<u>U29</u>	Valid for AAC [KLA]	21H
<u>U74</u>	Valid for diesel engines	11H
<u>U75</u>	Valid for gasoline engines	14H
<u>U673</u>	Valid for comfort AAC [K-KLA]	21H
<u>Y36/8</u>	Electronic rear axle level control valve unit	5F
<u>CAN B</u>	Interior CAN	20B 22D 22H
<u>CAN C</u>	Engine compartment CAN	9D 9G 12D 12F 12G 20F
<u>1</u>	Door rotary tumbler switch, status	11F 19A 22E