

<u>2</u>	Rear-end door locking unit, status	11F 19A 22D
<u>3</u>	Activate system, signal	11E
<u>4</u>	Level sensor, status	8F
<u>5</u>	Engine speed, signal	10G
<u>6</u>	Outside air pressure/temperature, signal	10G
<u>7</u>	Outside temperature indicator temperature sensor, signal	12F 22G
<u>8</u>	AIRMATIC compressor, actuation	2C 3E
<u>9</u>	Level control valve, actuation	6F
<u>10</u>	AIRMATIC pressure reduction valve, actuation	3C
<u>11</u>	Wheel speed, signal	10D
<u>12</u>	Steering angle, signal	11E 14B
<u>13</u>	Level control fault, message	8H