

[Close Window] [[Print Window](#)]

Item	Designation	Coordinates
<u>A8/1</u>	Transmitter key	7B
<u>M5/2</u>	HCS pump	3H
<u>N10</u>	Front SAM control unit	6E
<u>N72/1</u>	Upper control panel control module	6K
<u>N73</u>	EIS [EZS] control unit	6A
<u>N80</u>	Steering column module	2B
<u>N93</u>	Central gateway control module	2E
<u>S1</u>	Exterior lamp switch	3K
<u>S4</u>	Combination switch	1A
<u>CAN_B</u>	Interior CAN	4E 6D 6H
<u>CAN_C</u>	Engine compartment CAN	2D
<u>LIN_1</u>	Instrument panel LIN	4K
<u>1</u>	Circuit 15, status	7D
<u>2</u>	Rotary light switch, status	5K 7G
<u>3</u>	Combination switch, switch position	3D 5E
<u>4</u>	HCS [SRA] pump, actuation	4G