




[Close Window] [[Print Window](#)]**Steps 1 - 8**

 	Remove/Install		
1	Remove front bumper		AR88.20-P-2000RT
2	Disconnect washing water hose (2) with clamp	 Clamping device	*000589403700
3	Press safety clip (1) and detach washer fluid hose (2) from telescopic nozzle (4)		
4	Loosen nut (3)		
5	Remove telescopic nozzle (4)		
6	Install in the reverse order		
7	Check headlamp cleaning system for proper function Windshield wipers, windshield washer system and headlamp cleaning system - function check		AP82.30-P-8252RT
8	Check windshield washer system - fluid level, correct if necessary Windshield washer system - inspect fluid level, adjust to correct level		AP82.35-P-8210RT