

	Fuse assignment of fuse box in cockpit	F3	GF54.15-P-1256-16GV
	Fuse assignment of load compartment fuse and relay box	F4	GF54.15-P-1256-14GV
	Relay assignment of the load compartment fuse and relay box	F4	GF54.15-P-1257-08GV
	Fuse assignment of front prefuse box	F32	GF54.15-P-1256-07GV
	Fuse assignment of battery compartment prefuse box	F33	GF54.15-P-1256-15GV
	Fuse assignment of fuse box in luggage compartment	MODEL 251.1 with ENGINE 642.870 as of model year 2009 F37	GF54.15-P-1256-05GM
	Fuse assignment of fuse and relay box in right engine compartment	F58	GF54.15-P-1256-02GV
	Relay assignment of fuse and relay box in right engine compartment	F58	GF54.15-P-1257-02GV