


P68.20-3428-07


- 1 Guide rail covering
- 3 Floor covering
- 4 Center console

- 2 Guide rail covering

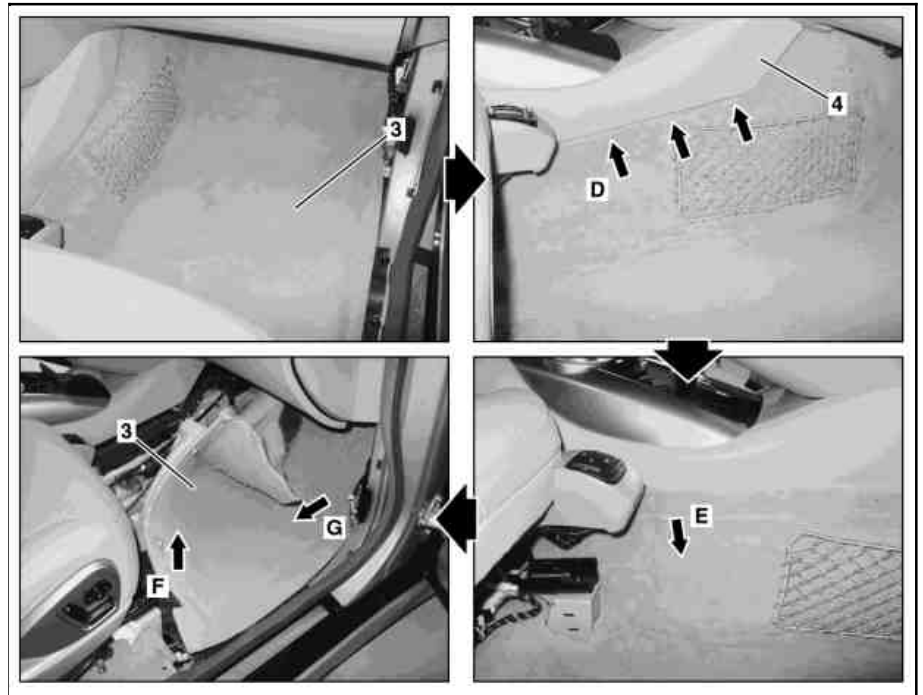

P68.20-3429-06

	Remove/Install		
1	Completely move right front seat toward rear	See Operator's Manual	
2	Remove door sill molding		<a href="#">AR68.30-P-4100RT</a>
3	Remove paneling in footwell		<a href="#">AR68.30-P-4010RT</a>
4	Unclip guide rail cover (1) and remove from guide rail toward front (arrow A).	To unclip, guide suitable tool into opening in guide rail cover (1) (arrow B) and unclip guide rail cover (1).	
5	Unclip guide rail cover (2) and remove from guide rail at side (arrow C).	Long wedge	<a href="#">*115589035900</a>
6	Pull floor covering (3) out below center console (4) (arrows D)	Long wedge	<a href="#">*115589035900</a>
7	Pull out floor covering (3) between front seat and center console below center console (arrows E) and pivot toward front.		
8	Raise floor covering (3) on front seat (arrow F) and pull out of footwell (arrow G) toward rear.	<b>Installation:</b> Ensure that front floor covering (3) is seated correctly below center console	
9	Remove floor covering (3)		
10	Install in the reverse order		

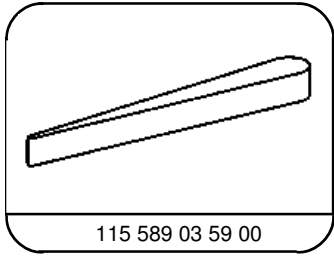

115 589 03 59 00

Long wedge