

[Close Window] [[Print Window](#)]

Steps 1 - 8

	Remove/install		
a	Danger! Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
a	Danger! Risk of poisoning caused by swallowing brake fluid. Risk of injury caused by brake fluid coming into contact with skin and eyes.	Pour brake fluid only into suitable and appropriately marked containers. Wear protective clothing and eye protection when handling brake fluid.	AS42.50-Z-0001-01A
p	Notes on repairs to brake system	All models	AH42.00-P-0003-01A
1	Lift/jack up vehicle		AR00.60-P-1000RT
2	Remove rear wheels. Remove/install wheels, rotate if necessary		AP40.10-P-4050RT
3	Remove brake pads from floating brake caliper		AR42.10-P-0160RT
4	Detach brake hose (2) from floating brake caliper (1) Notes on installation of brake hoses	p Seal brake hose (2) immediately with stop plugs. The brake fluid expansion reservoir must not run empty otherwise air gets into the brake system. n l Set of plugs	AH42.10-P-9406-01RT *BA42.10-P-1001-14A *129589009100
5	Remove floating brake caliper (1)		
6	Unscrew bolts (3) and remove floating caliper carrier (4) Notes on self-locking nuts and bolts	i Installation: Install new bolts (3). All models n	AH00.00-N-0001-01A *BA42.10-P-1002-17J
7	Install in the reverse order		
8	Bleed brake system		AR42.10-P-0010RT