



Steps 1 - 4

 	Remove/install		
1	Press outside air temperature sensor (B10/5) toward rear out of air intake grille (1) and guide toward front.		
2	Disconnect electrical connector (2)		
3	Install in the reverse order		
4	Perform a function test		