
24.4.07

P82.60-5938-07

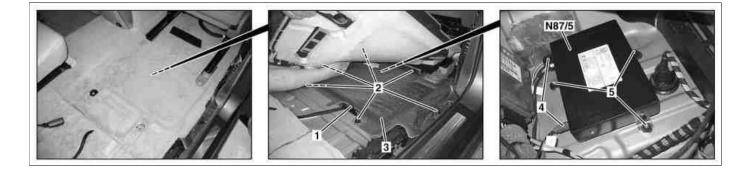

- 1 Bracket
- Nuts

2 3 Intermediate bottom

4 Electrical connectors Nuts

5

SDAR control unit N87/5

XX	Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge	All models	AH54.00-P-0001-01A
1	Turn key in ignition switch to position "0".	i On vehicles with Keyless-Go, code 889: Press keyless go start/stop button repeatedly until ignition is switched off	
2	Remove rear seat	i 2nd seat row, right.	AR91.12-P-1000RT
3	Remove door sill molding	i Only right rear.	AR68.30-P-4100RT
4	Remove paneling on B-pillar	i Lower section only. Only on vehicles with center rear individual seat, code 225.	AR68.30-P-4700RT
5	Unclip anchoring lug cover		
6	Unscrew bolt beneath	Nm	*BA68.50-P-1001-03G
7	Remove anchoring lug	i Installation: Ensure that guide lugs are installed correctly.	
8	Unclip rear seat rail covers from front seat		
9	Lift center floor cover		
10	Unclip brackets (1)		
11	Remove nuts (2)		
12	Remove intermediate bottom (3)		
13	Separate electrical connectors (4)		
14	Remove nuts (5)		
15	Remove SDAR control unit (N87/5)		
16	Install in the reverse order		

Nm Cargo retainers

Number	Designation		Model 251
BA68.50-P-1001-03G	Bolt, cargo retainers to body N	m	24