


MODEL 251

2nd seat row

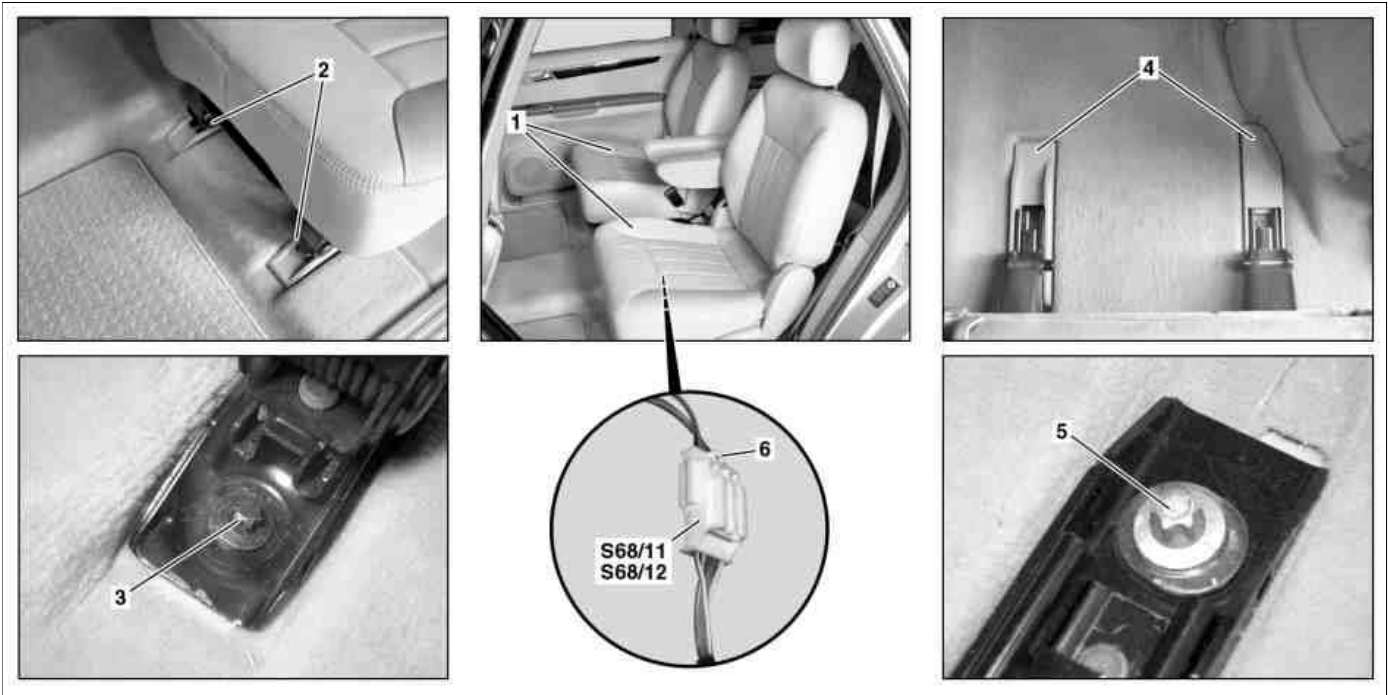














P91.12-2814-09

- 1 Rear seat  
2 Covers  
3 Bolts  
4 Covers  
5 Bolts

- 6 Electrical connector


- S68/11 Left rear seat belt buckle switch  
S68/12 Right rear seat belt buckle switch

 	Remove/install		
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit		On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).
2	Slide rear seat (1) backwards		See Operator's Manual
3	Unclip covers (2).	 	Toward front. Long wedge <a href="#">*115589035900</a>
4	Remove bolts (3)	 	Do not swap screws (3) with screws (5). <a href="#">*BA91.12-P-1001-03G</a>
5	Fold rear seat (1) forwards		See Operator's Manual
6	Unclip covers (4)	 	Backwards. Long wedge <a href="#">*115589035900</a>
7	Remove bolts (5)		<a href="#">*BA91.12-P-1001-03G</a>
8	Lift rear seat (1) at the front		
9	Disconnect electrical connector (6) from the left rear seat belt buckle switch (S68/11) or from the right rear seat belt buckle switch (S68/12)		
10	Remove rear seat (1) through rear door		With aid of helper.
11	Install in the reverse order		

 Rear seats

Number	Designation	Model 251

BA91.12-P-1001-03G	Screw of rear seat seat console to body	Nm	50
--------------------	---	----	----

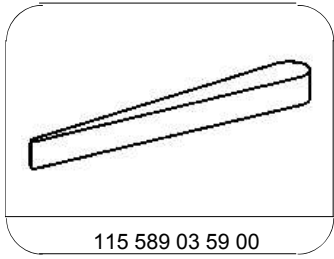

Long wedge