


AR91.16-P-1770-01LCA	Remove/install outer head restraint of rear bench seat		
----------------------	--	--	--

- Model 217.3**
except code 223 (Electrically adjustable rear bench seat)
- Model 222.0/1**
except code 223 (Electrically adjustable rear bench seat)
except code 224 (Rear individual seat design)

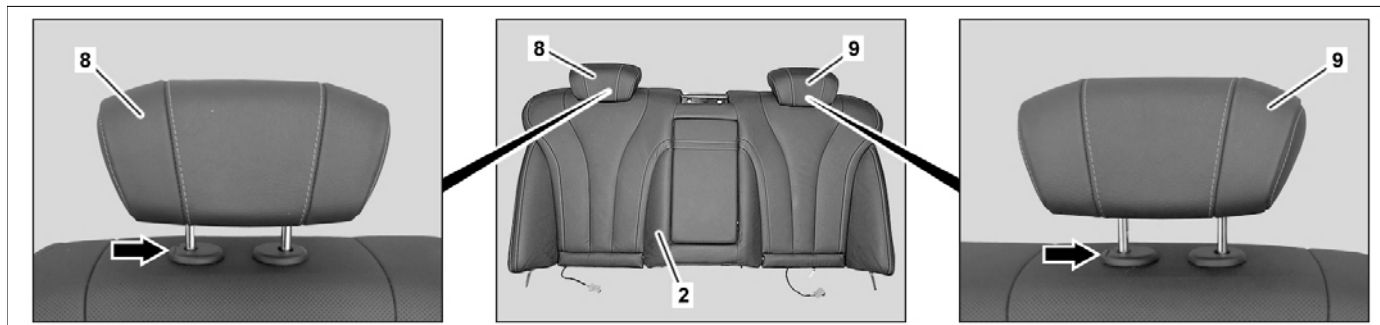

P91.16-2999-07

Remove/install

- 1 Pull right head restraint (8) or left head restraint (9) upwards up to end stop.
- 2 Press corresponding button (arrow) and remove right head restraint (8) or left head restraint (9) from head restraint guide.
- 3 Install in the reverse order.