 


Model 217.3

Model 222.0/1

except code 223 (Electrically adjustable rear bench seat)

except code 224 (Rear individual seat design)

	Remove/install		
1	Remove center head restraint	Upon removal of center head restraint. Model 222.0/1 except code 223 (Electrically adjustable rear bench seat) except code 224 (Rear individual seat design)	AR91.16-P-1770-02LCA
2	Remove seat backrest	Upon removal of an outer head restraint.	AR91.12-P-1620LF
3	Remove outer head restraint	Upon removal of an outer head restraint. Model 217.3 except code 223 (Electrically adjustable rear bench seat) Model 222.0/1 except code 223 (Electrically adjustable rear bench seat) except code 224 (Rear individual seat design)	AR91.16-P-1770-01LCA
4	Install in the reverse order		