


Model 205  
 Model 217  
 Model 222  
 Model 253  
 Model 293

## Shown on model 222


- 1 Nuts  
 2 Accelerator pedal  
 3 Electrical connector

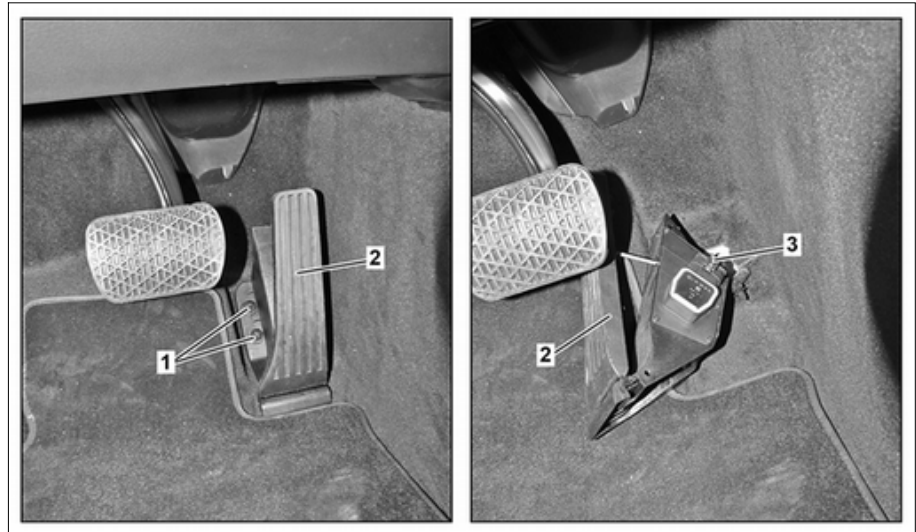




 

P30.12-2023-05

## Shown on model 205 (with code ME05 (HYBRID DRIVE 80KW-VARIANT (INCLUDING PLUG-IN)))

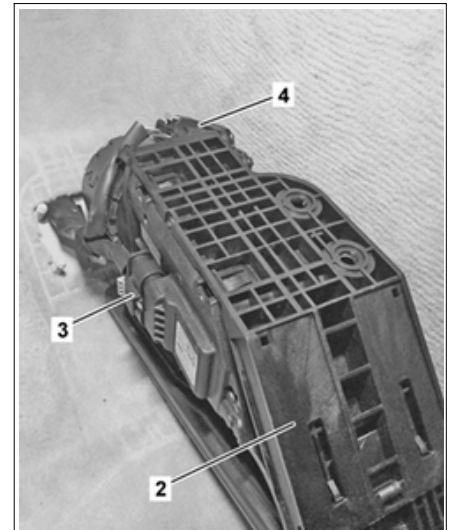- 2 Accelerator pedal  
 3 Electrical connector  
 4 Electrical connector



P30.12-2025-02

	Notes on safety-relevant components		AH00.00-Z-0019-01A
 	<b>Remove/install</b>		
1	Switch off ignition.		
2	Unscrew nuts (1), remove accelerator pedal (2) and place to one side.	 <b>Installation:</b> Ensure that the wiring harness is not pinched. Otherwise malfunctions of the accelerator pedal (2) can occur.  Nut, accelerator pedal to firewall	*BA30.20-P-1001-03B
3	Disconnect electrical connector (3).		
4	Disconnect electrical connection (4).	Model 205, 222, 253 with code ME05 (HYBRID DRIVE 80KW VARIANT (INCLUDING PLUG-IN)) Model 293	
5	Remove accelerator pedal (2).	 The accelerator pedal (2) must not be disassembled. It can be damaged and must be replaced otherwise.	
6	Install in the reverse order		

**Nm** Accelerator pedal

<b>Number</b>	<b>Designation</b>		<b>Model 205</b>	<b>Model 217</b>
BA30.20-P-1001-03B	Nut, accelerator pedal to firewall	Nm	8	8

**Nm** Accelerator pedal

<b>Number</b>	<b>Designation</b>		<b>Model 222</b>	<b>Model 253</b>
BA30.20-P-1001-03B	Nut, accelerator pedal to firewall	Nm	8	8

**Nm** Accelerator pedal

<b>Number</b>	<b>Designation</b>		<b>Model 293</b>
BA30.20-P-1001-03B	Nut, accelerator pedal to firewall	Nm	8