

Model 217


Model 222

Modification notes

12.10.2020

Document revised.

Operation steps 1 to 8

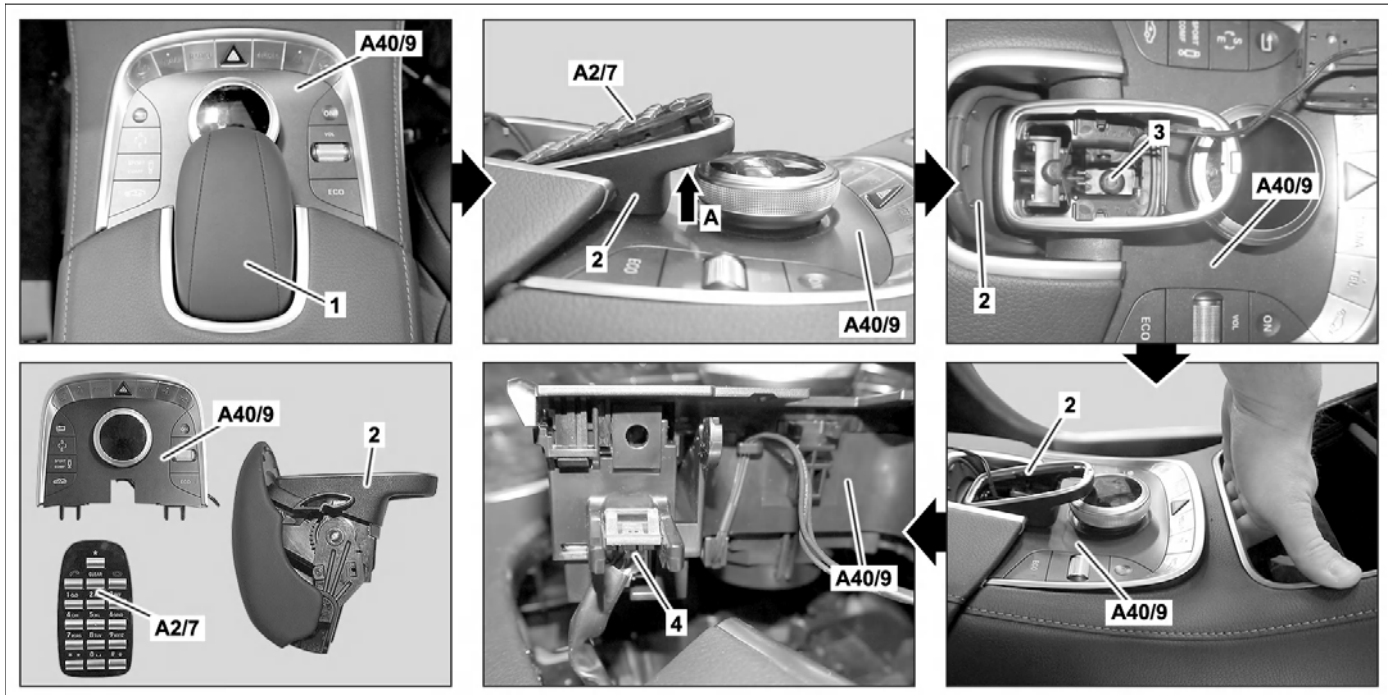

P54.21-3368-09

Shown on model 222.032

1 Hand rest

2 Telephone keypad housing

3 Screw

4 Electrical connector

A2/7 Telephone keypad

A40/9 Audio/COMAND control panel

Caution	Risk of injury caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Switch off ignition and store transmitter key outside of transmitter range (min. 2 m).		
2	Open front cover on center console.		
3	Remove cup holder.	Model 217, 222 with code 310 (Double cup holder)	
4	Remove touchpad (A105).	Model 217 with code 448 (Touchpad) Model 222 with code 448 (Touchpad)	AR54.21-P-0503LF
5	Open hand rest (1), unclip telephone keypad (A2/7) through the opening (arrow A) from the housing for the telephone keypad (2) and detach electrical connector from telephone keypad (A2/7).	Model 217, 222 except code 446 (Touchpad only) except code 448 (Touchpad)	

6	Remove bolt (3) .	Model 217, 222 except code 446 (Touchpad only) except code 448 (Touchpad)	
7	Grasp with hand between cover of center console stowage tray and center console, then push Audio/COMAND control panel (A40/9) upwards.		
8.1	Lift up Audio/COMAND control panel (A40/9) until electrical connector (4) is accessible.	Model 217, 222 with code 448 (Touchpad)	
8.2	Lift up Audio/COMAND control panel (A40/9) together with touchpad (A105) until electrical connector (4) and electrical connector on touchpad (A105) are accessible.	Model 217, 222 with code 446 (Touchpad only) i The Audio/COMAND control panel (A40/9) is removed together with touchpad (A105).	
8.3	Lift up Audio/COMAND control panel (A40/9) together with telephone keypad housing (2) until electrical connector (4) is accessible.	Model 217, 222 except code 446 (Touchpad only) except code 448 (Touchpad) i The Audio/COMAND control panel (A40/9) is removed together with telephone keypad housing (2).	
9.1	Release and disconnect electrical connector(4).	Model 217, 222 except code 446 (Touchpad only)	
9.2	Release and disconnect electrical connector at touchpad (A105) and electrical connector (4).	Model 217, 222 with code 446 (Touchpad only)	
10	Install in the reverse order.		