


- Model 217, 222**
with code 233 (DISTRONIC PLUS)
- Model 217, 222**
with code 234 (Blind Spot Monitoring)
- Model 217, 222**
with code 237 (Active Blind Spot Assist)

Shown on model 222 as of model year 2018

- 1 Electrical connector
2 Screw
3 Retaining lug
4 Bracket
B29/6 Left rear bumper radar sensor
B29/7 Right rear bumper radar sensor

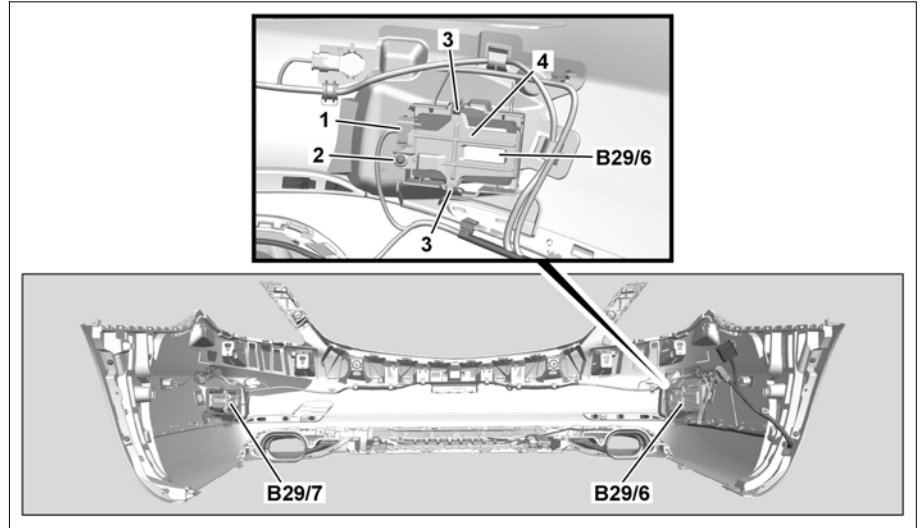

P54.71-2705-05

	Notes on preventing damage to electronic components due to a magnetic tool		AH54.00-P-0002-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Commission rear left bumper radar sensor (B29/6) or rear right bumper radar sensor (B29/7)	When replacing the left rear bumper radar sensor (B29/6) or the right rear bumper radar sensor (B29/7).	AD00.00-P-2000-04B
	2 Remove rear bumper	Model 217 Model 222	AR88.20-P-2200LC AR88.20-P-2200LF
3	Disconnect electrical connector (1)		
4	Unscrew bolt (2)	Model 217, 222 as of model year 2018	
5.1	Unlock retaining lug and remove left rear bumper radar sensor (B29/6) or right rear bumper radar sensor (B29/7) from bracket (4)	Model 217, 222 up to model year 2018	
5.2	Release retaining lugs(3) and remove rear left bumper radar sensor(B29/6) or rear right bumper radar sensor(B29/7) from holder(4)	Model 217, 222 as of model year 2018	
6	Install in the reverse order		