


Model 217

- 1 Side paneling
- 2 Left rear lamp unit
- 3 Right rear lamp unit
- 4 Nuts
- 5 Electrical connector

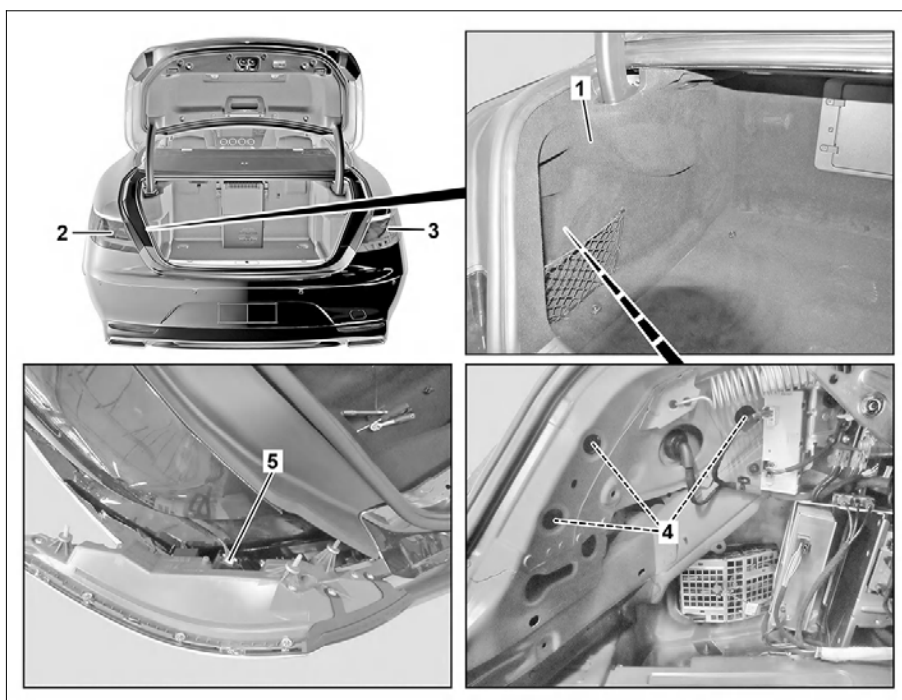

P82.10-7504-06

	Notes on sensor system for trunk lid opening/closing		AR80.61-P-0001-01A
	Remove/install		
1	Remove load compartment floor	Model 217.4 Model 217.3	AR68.30-P-4820LCA AR68.30-P-4600LC
2	Detach side paneling (1) in area of left rear lamp unit (2) or right rear lamp unit (3) until nuts (4) are accessible	Model 217.4 Model 217.3	AR68.30-P-4800LCA AR68.30-P-4600LC
3	Unscrew nuts (4)		
4	Remove left rear lamp unit (2) or right rear lamp unit (3) until electrical connector (5) at left rear lamp unit (2) or right rear lamp unit (3) is accessible		
5	Disconnect electrical connection (5)		
6	Remove left rear lamp unit (2) or right rear lamp unit (3)		
	Check		
7	Check for correct seating of the left rear lamp unit (2) or right rear lamp unit (3)	Taillamp to bumper Outside of taillamp to inside of taillamp Rear fender to taillamp Feeler gauge	AR60.00-P-0700-01LC *BE60.00-P-1017-01DA *BE60.00-P-1018-01DA *BE60.00-P-1008-01DA *129589032100
8	Install in the reverse order		

Check values for gap dimensions

Number	Designation	Dimension "F9C"	mm	Model 217.3	Model 217.4
BE60.00-P-1008-01DA	Rear fender to taillamp			1,0 (±0,5)	1,0 (±0,5)
		For picture, see		AR60.00-P-0700-01LC	AR60.00-P-0700-01LC


Check values for gap dimensions

Number	Designation	Model 217.3	Model 217.4
--------	-------------	-------------	-------------

BE60.00-P-1017-01DA	Taillamp to bumper	Dimension "F162A" mm	1,5 (± 1,0)	1,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

Check values for gap dimensions

Number	Designation		Model 217.3	Model 217.4
BE60.00-P-1018-01DA	Outside of taillamp to inside of taillamp	Dimension "F164" mm	3,5 (± 1,0)	3,5 (± 1,0)
		For picture, see	AR60.00-P-0700-01L C	AR60.00-P-0700-01 LC

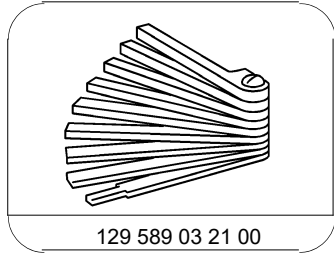

129 589 03 21 00

Feeler gauge