


MODEL 217, 222

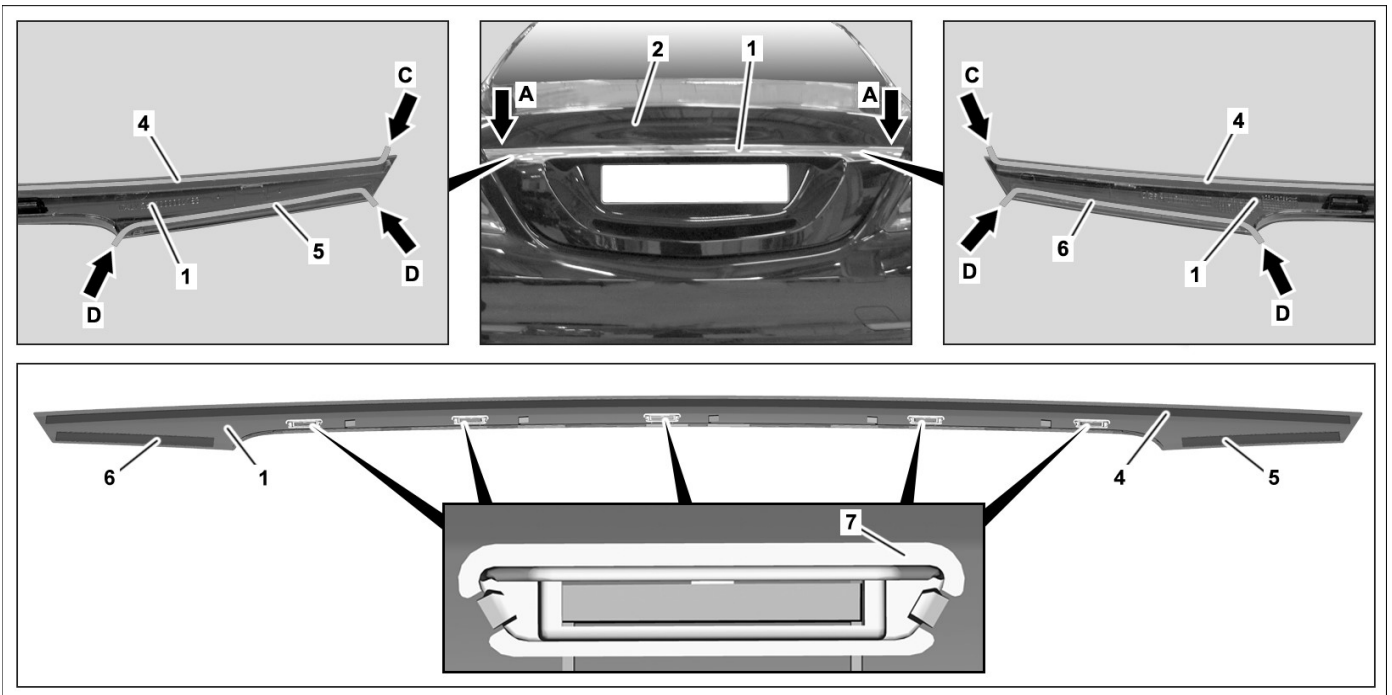

P88.85-2112-09


Shown on MODEL 222

1 Trim piece
2 Trunk lid

4 Protective foil
5 Protective foil

6 Protective foil
7 Retaining clips

	Remove		
1	Remove handle strip from trunk lid	MODEL 222	AR88.50-P-5062LF
2	Detach trim piece (1) (arrows A)	Mounting wedge	*110589035900
3	Unclip trim piece (1) from trunk lid (2) using assembly wedge	Mounting wedge	*110589035900
4	Remove adhesive residues from trunk lid (2) and clean bonding surface with surface conditioning disk Notes on removing adhesive residues and foils on paint and metal surfaces with surface conditioning disks	<p> Bonding surface must be free of grease and dust.</p> <p> Observe flash-off time for cleaning agent. Cleaner</p>	AH00.00-P-0013-01AK *BR00.45-Z-1025-04A
	Install		
5	Slightly remove protective foils (4, 5 and 6) from adhesive strips on trim piece (1) at ends (arrows C, D) and bend 45° in direction of outer edge		
6	Position trim piece (1) on trunk lid (2) and slightly press on area of edge	Retaining clips (7) can be used to position trim piece (1).	
7	Remove protective foils (4, 5 and 6) from adhesive strips on trim piece (1) and press on trim piece (1)	<p> When removing protective foils (4, 5 and 6) for adhesive strips on trim piece (1), ensure that the outer protective foil is removed upward and the inner protective foil downward.</p> <p> When pressing on, press directly on adhesive strips on trim piece (1).</p>	
8	Install trunk lid handle strip	MODEL 222	AR88.50-P-5062LF

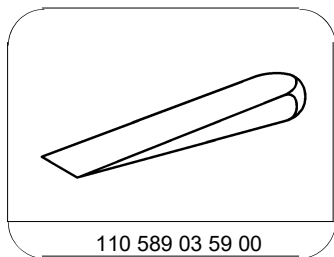

110 589 03 59 00

Mounting wedge

Repair materials

Number	Designation	Order number
BR00.45-Z-1025-04A	Cleaner	A 005 989 19 71