


MODEL 217

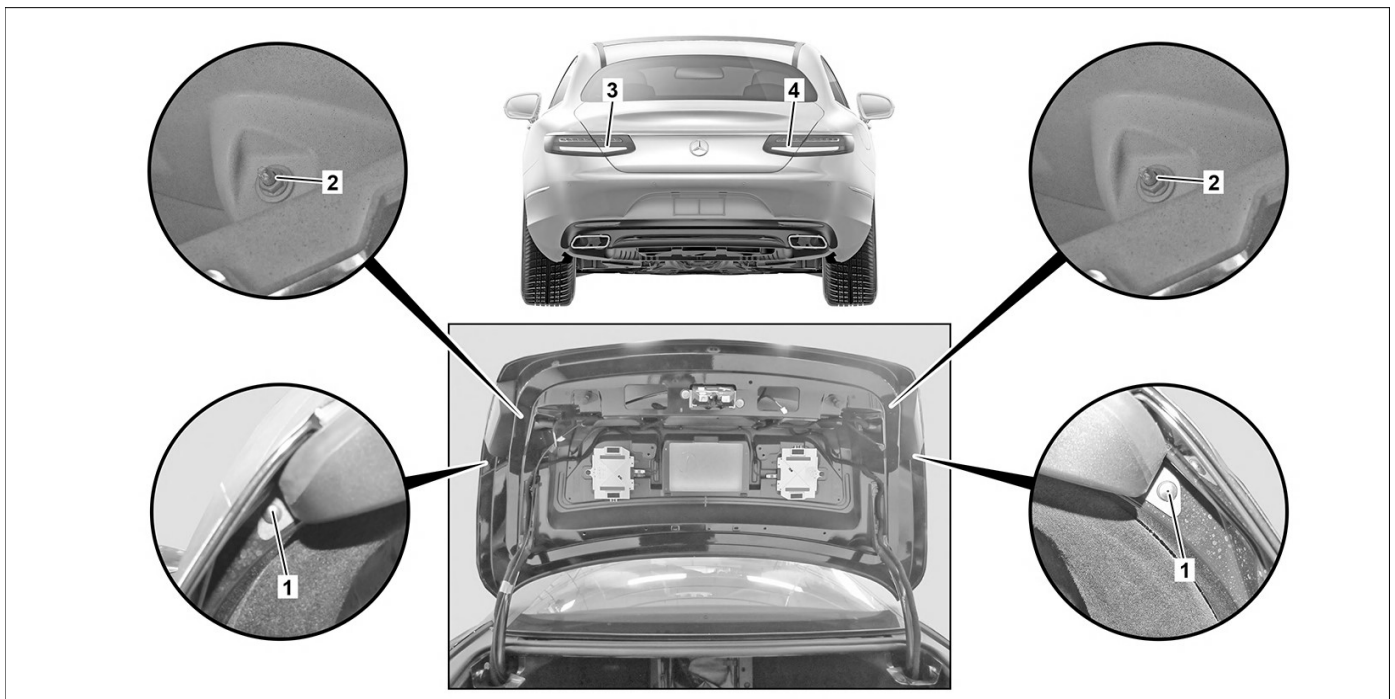

P82.10-7519-09

1 Retaining clip
2 Nuts

3 Left taillamp
4 Right taillamp

Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
	Remove/install		
1	Remove trunk lid cover		AR88.50-P-5000LC
2	Remove retaining clips (1)		
3	Unscrew nuts (2)		
4	Remove left taillamp (3) or right taillamp (4) until electrical connector is accessible		
5	Disconnect electrical connector of left taillamp (3) or right taillamp (4)		
6	Remove left taillamp (3) or right taillamp (4)		
7	Install in the reverse order		