


FUSE/RELAY BOX

AS OF MY 1986

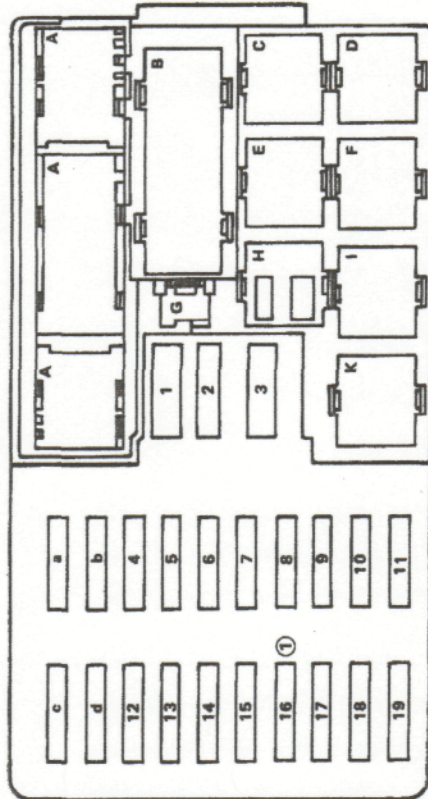

FUSES
(SEE PAGE 102)

RELAYS
(SEE BELOW)

RELAY CODE	RELAY USE
A	Exterior Lamp Failure Monitoring Unit
B	Combination Relay (Turn Signal, Hazard Lamps, Wiper/Washer)
C	High Speed Relay (Auxiliary Fan)
D	Low Speed Relay (Auxiliary Fan)
E ①	Air Pump Clutch (Electronic Engine Controls/Air Injection Management)
F	Headlamp Washer Relay (Headlamp Wiper/Washer)

RELAY CODE	RELAY USE
G	Power Seat Diode (Power Seats)
H	Power Seat Relay
I	Power Window Relay (Power Windows)
K	Auxiliary Fuse Holder (Anti-theft Alarm System)

REVISIONS: ① IN-LINE FUSE REPLACES FUSE NO. 16 AS OF CHASSIS END NUMBER 269897.
② GASOLINE ENGINES ONLY.