 




 



MODEL 215, 220


Shown on model 220

- 1 Rosette
 2 Shift lock cable
 3 Electrical connector
 N73 Electronic ignition switch control unit
 210 589 00 07 00

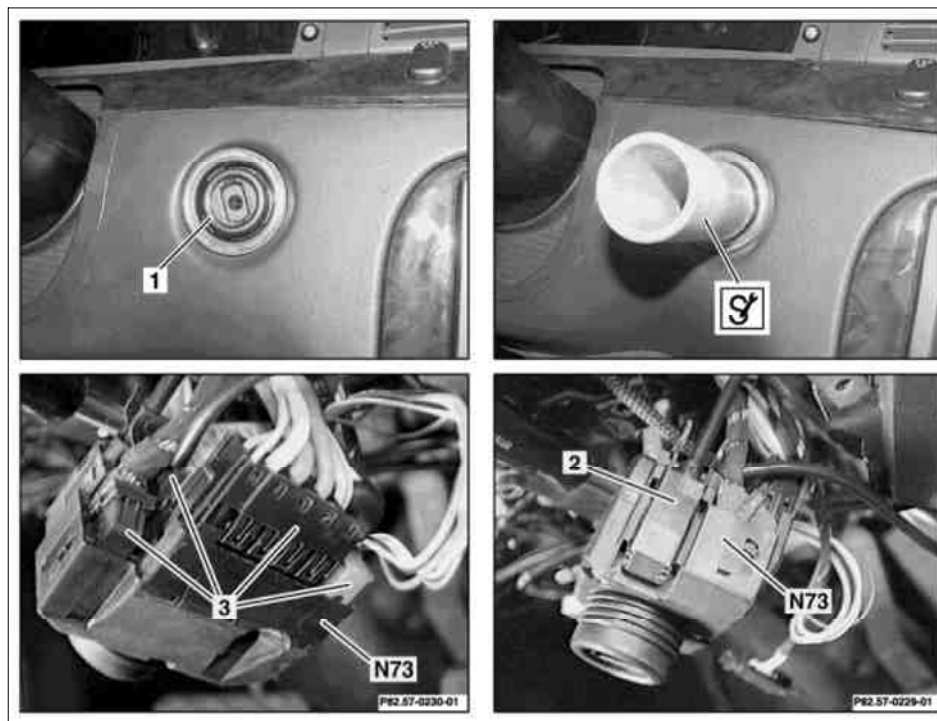

P80.57-2002-06

	Removal/installation		
 Danger!	Risk of explosion caused by oxyhydrogen gas. Risk of poisoning and caustic burns caused by swallowing battery acid. Risk of injury with caustic burns to eyes and skin from battery electrolyte or from handling damaged lead-acid batteries	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and goggles. Pour battery acid only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
1 	Disconnect battery ground cable Notes on battery	All models	AR54.10-P-0003I AH54.10-P-0001-01A
2	Remove cover on center console	Model 215 Model 220 up to 31.8.02	AR68.20-P-2350N AR68.20-P-2350M
3	Remove operating and display unit with control unit	Model 220 up to 31.8.02 with CODE (352a) COMAND operating and display system Model 220 as of 1.9.02	AR82.85-P-7472I AR82.85-P-1000M
4	Move selector lever to position "P"		
5	Remove electronic ignition key		
6	Unscrew rosette (1) with special tool		*210589000700
7	Remove electronic ignition switch (N73) toward rear and remove through cover opening for center console.		
8	Remove shift-lock control cable (2) from electronic ignition switch (N73)		
9	Disconnect electrical connectors (3) from electronic ignition switch (N73)		
10	Install in the reverse order	 Installation: When replacing the electronic ignition switch (N73) program according to programming instructions included in the programming station	

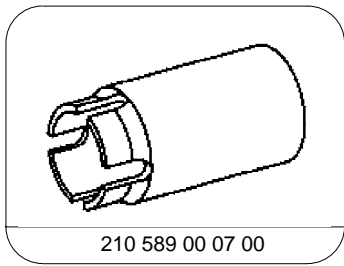

210 589 00 07 00

Claw-type wrench for rosette on ignition
switch