


MODEL 220, 215

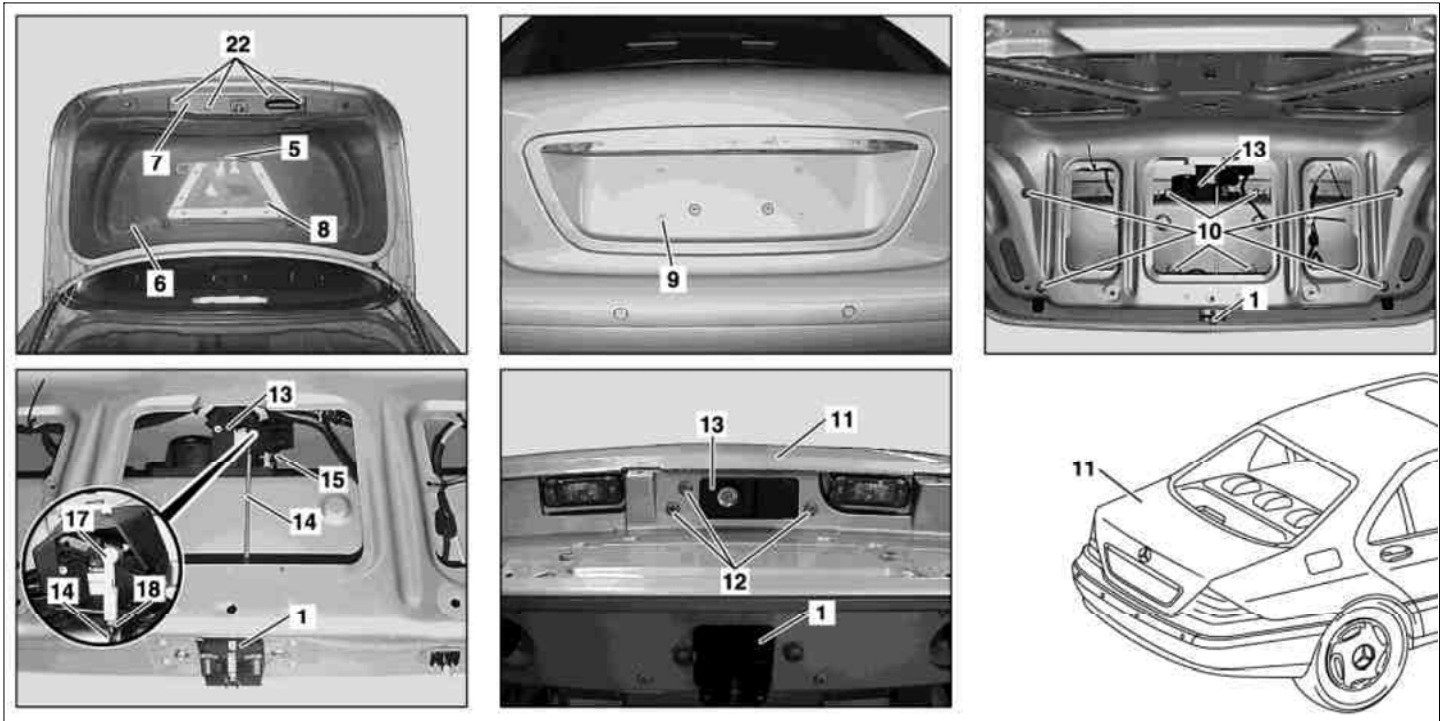


P88.50-2011-09

Shown on model 220

- 1 Trunk lid lock
- 5 Bracket
- 6 Inner trunk lid paneling
- 7 Cover
- 8 Hazard warning triangle

- 9 Covering
- 10 Nuts
- 11 Trunk lid
- 12 Bolts
- 13 Trunk lid handle

- 14 Release rod
- 15 Electrical connector
- 17 Ball head
- 18 Nut
- 22 Bolts

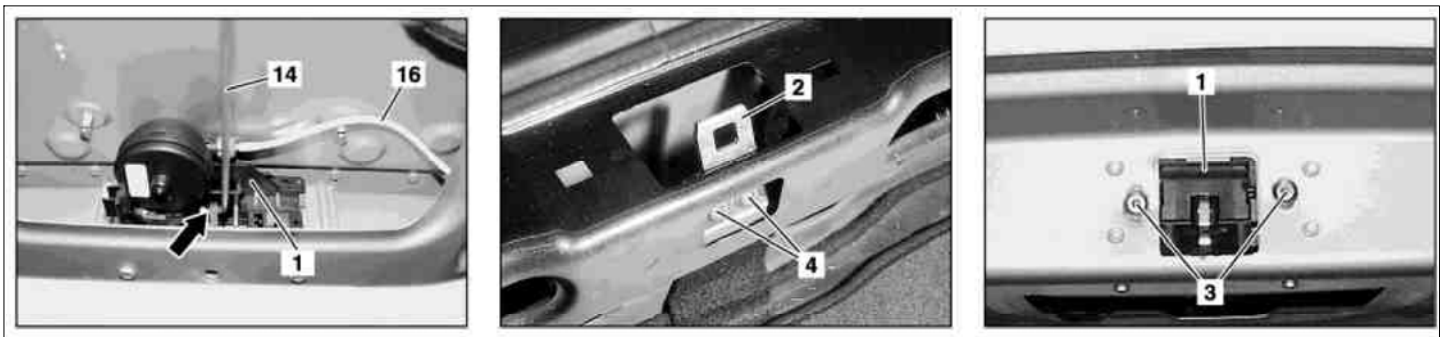

P88.50-2010-07

Shown on model 220


- 1 Trunk lid lock
- 2 Locking eye

- 3 Bolts
- 4 Bolts

- 14 Release rod
- 16 Pneumatic line

Shown on model 220

- 11 Trunk lid
- 13 Trunk lid handle
- 14 Release rod
- 17 Ball head
- 18 Nut
- 19 Mechanical key
- 20 Lever
- 21 Stop

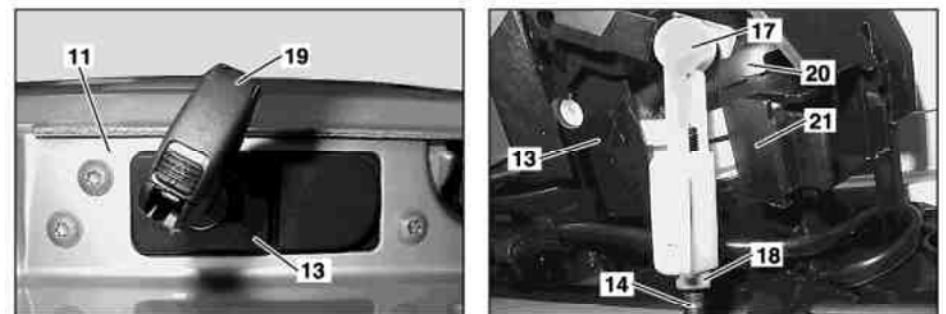

P88.50-2053-04

Modification notes

15.6.04	Elimination of 90° position in trunk lid handle	Step 13.1, 14.1	
---------	---	-----------------	--

	Remove/Install		
1	Remove hazard warning triangle (8) and take off bracket (5)		
2	Detach bolts (22) and remove cover (7).		
3	Remove inner trunk lid paneling (6) from trunk lid (11)		
4	Press release rod (14) off of trunk lid lock (1) (arrow)		
5.1	Unscrew bolts (3) and remove trunk lid lock (1)	On vehicles without code (884) Trunk lid auxiliary lock  Installation: Tighten bolts (3) after adjustment	
5.2	Remove trunk lid lock (1) with trunk lid auxiliary lock	On vehicles with code (884) Trunk lid auxiliary lock	AR88.50-P-5020-01N
6	Remove pneumatic line (16) from trunk lid lock (1)		
7	Remove panel on rear center piece	Model 215.3, 220.0/1	AR68.30-P-4600M
8	Unscrew bolts (4) and remove locking eye (2) from rear center section	 Installation: Tighten bolts (4) after adjustment	
9	Unscrew nuts (10) and remove covering (9)		
10	Press release rod (14) on ball head (17) off of lever of trunk lid handle (13)		
11	Unscrew bolts (12) and remove trunk lid handle (13) from trunk lid (11)		*BA88.50-P-1006-01A
12	Disconnect electrical connector (15) and remove trunk lid handle (13)		
13.1	Remove stop for selector drum on new trunk lid handle (13)  BT Elimination of 90° position in trunk lid handle	Only when replacing trunk lid handle (13). Model 215 up to vehicle identification number 043783 Model 220 up to date of manufacture 4.11.03 Model 215 as of vehicle identification number 043784 Model 220 as of date of manufacture 5.11.03	AR88.50-P-5060-01N AR88.50-P-5060-01M BT88.50-P-1000-01N BT88.50-P-1000-01M
14.1	Transfer trunk lid contact switch on trunk lid handle (13)	Only when replacing trunk lid handle (13) on model 215 up to vehicle identification number 043783 or model 220 up to production date 4.11.03.	
15.1	Transfer lock cylinder on trunk lid handle (13)	Only when replacing trunk lid handle (13).	
16	Install in the reverse order		
	Adjust		
17	Screw bolts (3) into trunk lid lock (1) and align centered in relation to cutout for trunk lid (1)		
18	Tighten bolts (3)		*BA88.50-P-1002-01A
19	Align locking eye (2) in center in relation to trunk lid lock (1)		
20	Adjust height of locking eye (2) so that edges of trunk lid (11) are flush with fender and the trunk lid (11) can be closed easily.		
21	Tighten bolts (4)		*BA88.50-P-1004-01A
22	Insert mechanical key (19) into trunk lid handle (13) and turn to stop to left as illustrated		
23	Turn release rod (14) until there is no play between lever (20) and stop (21)	 To adjust release rod (14), loosen nut (18)	
24	Check trunk lid fit (11) in relation to rear fenders, adjust if necessary		AR88.50-P-5200M
25	Check closing system for proper function	 When trunk lid (11) is open, lock trunk lid lock (1) with screwdriver and unlock by actuating trunk lid handle (13)	

Nm Trunk lid

Number	Designation		Model 215	Model 220
BA88.50-P-1002-01A	Bolt to trunk lid lock	Nm	9	9
BA88.50-P-1004-01A	Bolt to locking eye	Nm	9	9
BA88.50-P-1006-01A	Bolt, locking lug to trunk lid	Nm	9	9