

## Exterior mirror, electrically folding



The buttons are located on the driver's door.

- 1 Push button to fold both mirrors out.
- 2 Push button to fold both mirrors in.

## Important!

If an exterior mirror housing is forcibly pushed (hit from the rear), it must be repositioned by applying firm pressure until it snaps back into place.

If an exterior mirror is forcibly pushed rearward from the front, press button (2) to fold mirrors in. Do not attempt to adjust the mirror by hand.

Before running the vehicle through an automatic car wash, fold mirrors in, otherwise they might be damaged.

Note:

The mirrors can vibrate if they are not completely folded out.