


AR54.21-P-1259I **Removing and installing SAM control module with fuse and relay box in rear** **21.11.97**
MODEL 215, 220

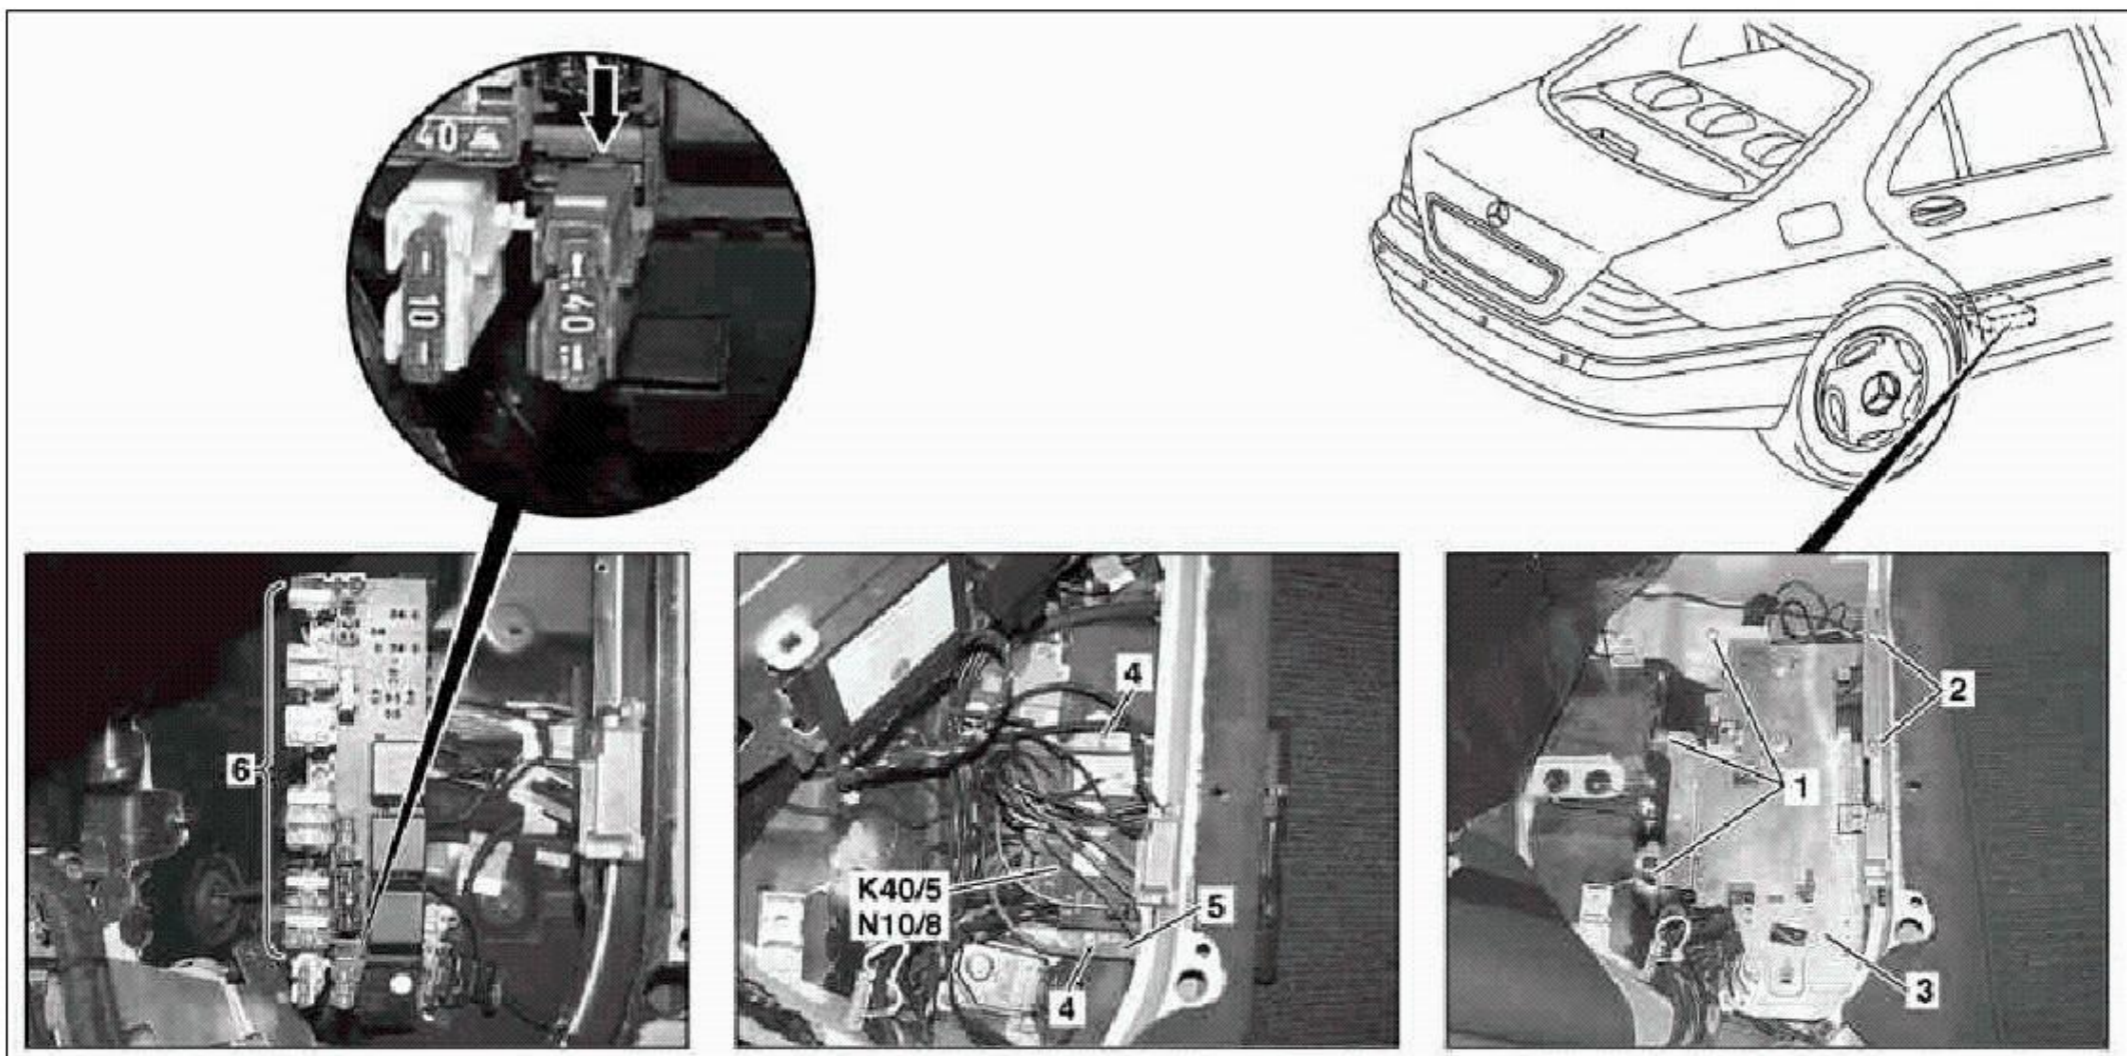

Document 240% Continuous document Validity off Page 1 of 1

Document Picture Operation steps

Shown on model 220


1	Nuts	4	Nuts	K40/5	Fuse and relay module in rear
2	Screws	5	Arresting lever	N10/8	SAM control module in rear
3	Mounting plate	6	Fuse carrier		

Removal, installation			
1	Connect quiescent current retention unit		AR54.10-P-1030-07I
2	Disconnect ground lead from battery		AR54.10-P-0003I
3.1	Remove rear seat cushion	Model 215 Model 220	AR91.12-P-1020N AR91.12-P-1020MA
3.2	Remove bucket seats	Model 220 with code 401, right-hand side only	AR91.12-P-1020M
4.1	Remove seat adjustment device on rear seat	Model 220 with code 401, right-hand side only	AR91.12-P-1520M
5	Unscrew screws (2) and nuts (1), remove mounting plate (3) from vehicle floor and pivot toward rear		
6	Pivot arresting lever (5) for power supply (c. 30) up and pull out wire		
7	Unscrew nuts (4) and remove control module unit (rear fuse and relay module (K40/5) and SAM control module in rear (N10/8)) from floor		

21:50 24/02/2015

Document 240% Continuous document Validity off Page 1 of 1

Document Picture Operation steps

		only	
5	Unscrew screws (2) and nuts (1), remove mounting plate (3) from vehicle floor and pivot toward rear		
6	Pivot arresting lever (5) for power supply (c. 30) up and pull out wire		
7	Unscrew nuts (4) and remove control module unit (rear fuse and relay module (K40/5) and SAM control module in rear (N10/8)) from floor		
8	Disconnect connectors from control module unit (rear fuse and relay module (K40/4) and SAM control module in rear (N10/8))		
 GF	Fuse assignments, standard Relay assignments, standard		GF54.15-P-1256I GF54.15-P-1257I
9	Unclip fuse carrier (6) from fuse and relay module in rear	<p>i After pressing the retaining lugs (arrow) in the direction of the arrow the fuse carriers can be removed upward.</p> <p>i The number of fuse carriers from the fuse and relay module in the rear can vary depending on the equipment and vehicle. If SAM control module in rear or fuse and relay module in rear are defective: ↓ Disconnect SAM control module from fuse and relay module</p>	AR54.21-P-1259-01I
10	Install in opposite order		

Windows taskbar: 21:51 24/02/2015