


MODEL 220.0 /1 with CODE (223b) Electrically adjustable rear bench seat
 MODELS 220.875 /878
 vis-à-vis seats

Shown on model 220.1

- 1 Springs for seat locking mechanism
- 2 Pins for locating rear seat cushion
- 3 Electrical connector for heated seats
- 4 Rear seat cushion
- 5 Electrical connector for seat ventilation

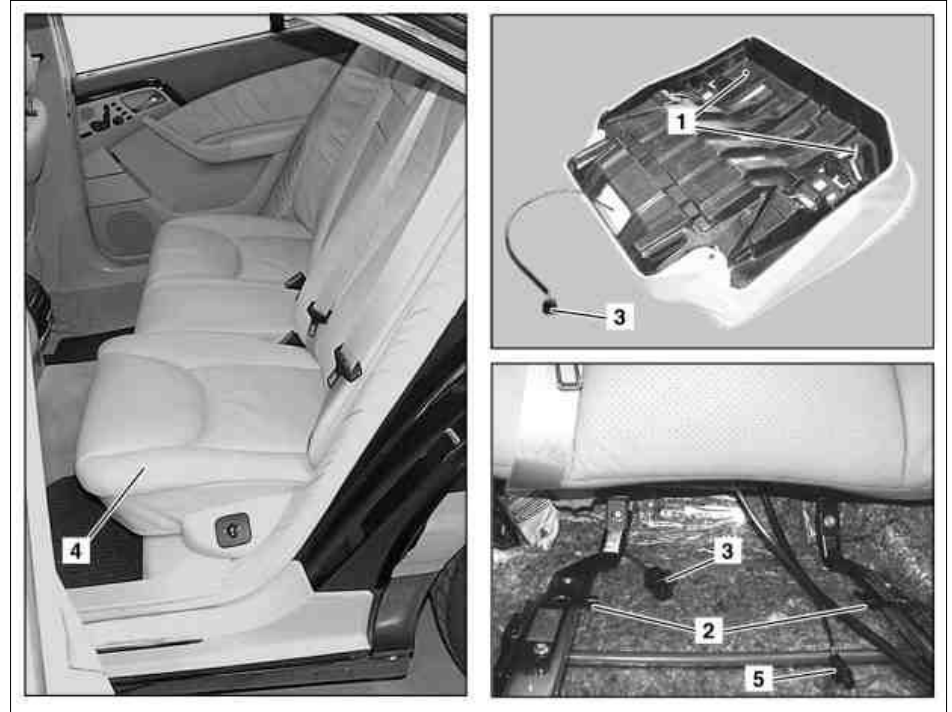

P91.12-2525-06

☒ ☒	Remove/Install		
1	Move rear seat cushion (4) fully forwards		
2	Press springs (1) below the rear seat cushion (4) outwards and remove seat cushion	ⓘ Installation: Ensure that the pins (2) on the seat adjuster move in the guides on the seat.	
3.1	Disconnect electrical connector for heated seats (3)	With electric heated seats for left and right rear seat, code 872.	
3.2	Disconnect electrical connector of seat ventilation (5) and heated seats	With seat ventilation for rear seats, code 402a.	
4	Install in the reverse order		