


MODEL 124, 129 (except 129.067), 140, 170 (except 170.447), 210 (except 210.065/070/082), 215, 220  
without CODE 494 (US version)  
without CODE 808 (Model year 1998)

MODEL 461

MODEL 463  
up to model year 2013

Shown on model 210

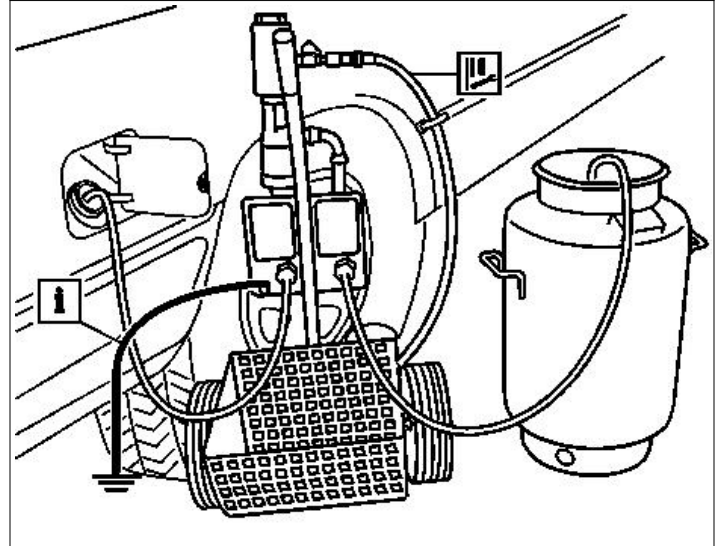

P47.10-0328-11

	Remove/install		
<b>⚠ Danger !</b>	<b>Risk of explosion</b> caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel.	No fires, sparks, open flames or smoking. Pour fuels into suitable and appropriately marked containers only. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
1	Connect extraction hose at the extraction pump	Fuel pump, gasoline/diesel <a href="#">gotis://D_47_02.0</a>	
2	Connect extraction pump to ground	<b>i</b> To do this pay attention to operator's manual from equipment manufacturer. Fuel pump, gasoline/diesel <a href="#">gotis://D_47_02.0</a>	
3	Pump out fuel through filler neck into safety vessel	<b>i</b> For model 215 a fuel hose should be used with a maximum of a 15 mm outside diameter	