

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Instrument cluster with maintenance interval display

- Control unit version
- Fault codes
- Events
- Actual values
- Actuations
- Initial startup
- Control unit adaptations
- Complete list of guided tests
- Full list of fault codes and events
- Control unit log
- Troubleshooting by means of complaints or symptoms
- Service information
- Special functions
- Diagnosis to plant specifications**

ESC F1 F3 F6 F11

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Main menu of control module KIW2M

- Control unit version
- Fault memory
- Actual values
- Actuations
- Control unit adaptations**
- Entry of service data (API1)

ESC Backward F3 F6 F11

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Control unit adaptations

Read coding and/or transfer download data to new control unit.

Control unit adaptations (Variant coding)

Control unit adaptations (Download)

ESC F1 F3 F11

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Control unit adaptations

Aktuelle Menüeinstellungen

Daten_RR_1

Daten_RR_2

Menü-Werkseinstellungen

Tankdaten

Variantenkodierung

Öldaten

Öldaten_Service

Öldaten_Service_fix

F1 F3 F11

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Variantenkodierung

CHECK-ENGINE-Lampe	aktiv
Darstellung Geschwindigkeitswarnung	km/h
Darstellung des Hintergrundsymbols	ja
Datenfunk	aus
Datumsanzeige Grundbildebene	ein
EPC Displaymeldung	nicht vorhanden
Einheit DTR-Skala	Feet

F1 F3 F11

Turn date on "ein"

05/2012 [2012-04-12] Ignition ON VIN : WDD1714561A001234 Battery voltage: 12.5 V

Vehicle **203.056** Control unit **ICM**

Variantenkodierung

Menü 15 Einstellung Datum	aktivieren
Menü 16 Umfeldbeleuchtung	aktivieren
Menü 18 Druckeinheit	aktivieren
Menü 21 Taxi-Dachzeichen	aktivieren
Menü 23 Taxi oder Privat	aktivieren
Menü 24 Schlüsselabhängigkeit	aktivieren
Menü 25 Spiegelanklappen	aktivieren
Menü 26 Heckdeckelklappung	aktivieren

F1 F3 F11

Activate key dependency "aktivieren"