

Tires and wheels

▷▷ **i** Reactivate the TPMS after adjusting the tire inflation pressure to the inflation pressure recommended for the vehicle operating condition. Tire inflation pressure should only be adjusted on cold tires. Observe the recommended tire inflation pressure on the placard on the driver's door B-pillar (▷ page 520). Some vehicles may have supplemental tire inflation pressure information for driving at high speeds (▷ page 526) or for vehicle loads less than the maximum load-ed vehicle condition. If such information is provided, it can be found on the inside of the fuel filler flap (▷ page 506).

i After wheel rotation or sensor replacement, the vehicle must be parked for 20 minutes before attempting to reactivate the TPMS.

i The menu overview can be found on (▷ page 244).

► Switch on the ignition (▷ page 322).

► Press **◀** or **▶** to select the menu "Service".

► Press **▲** or **▼** to select "Tire pressure".

► Press **OK**.

You will see

- the current inflation pressures for each tire

or

- the message
"Tire pressures displayed after driving a few minutes"

appear in the multifunction display.

► Press **▼**.

The message

"Use current pressure values as new reference values
To confirm press "OK!"

appears in the multifunction display.

► Press **OK**.

The message

- "Tire pressure monitor reactivated"

appears in the multifunction display.

- After a few minutes driving, the current tire inflation pressure values are accepted as reference values and then monitored.

If you wish to cancel activation:

► Press **◀**.

or

► Press **▲** to exit menu screen.

i When the wheel positions are changed on the vehicle, it is possible that the air pressure is temporarily displayed for the wrong position. This will be corrected after driving for several minutes, and the air pressure will be shown for the correct position.