


For more information on the Adaptive Highbeam Assist, see (▷ page 297).

### Showing or hiding additional speedometer

You can have an additional digital speedometer shown in the multifunction display. Depending on the setting for the speedometer display mode (▷ page 233), the speed is shown in the unit of kilometers/hour (setting miles) or miles/hour (setting km).


- ▶ Press button ◀ or ▶ to select the Settings menu.
- ▶ Press button ▼ or ▲ to select the Add. Speedometer function.
- ▶ Press button .

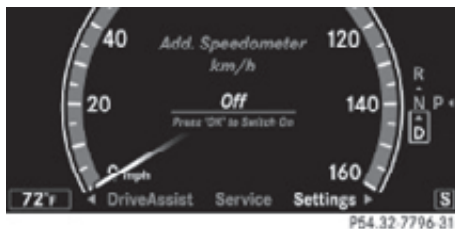

- ▶ Press button  again if you would like to change the current status. Depending on the previous status, the Add. Speedometer will be switched On or Off.

### Selecting speedometer display mode

- ▶ Press button ◀ or ▶ to select the Settings menu.
- ▶ Press button ▼ or ▲ to select the Units function.
- ▶ Press button .

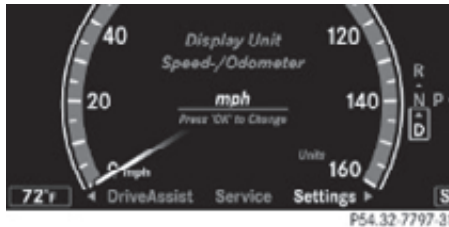

- ▶ Press button  again if you would like to change the current status. Depending on the previous status, the Display Unit Speed-/Odometer will be switched to miles or km. The additional speedometer (▷ page 233) will be shown in the other unit.

### Activating/deactivating the seat belt adjustment function<sup>32</sup>

Use this function to set the seat belts to be adjusted automatically with the driver's or front passenger seat belt fastened and the starter switch in position 2.

For more information on the seat belt adjustment function, see (▷ page 52).

- ▶ Press button ◀ or ▶ to select the Settings menu.
- ▶ Press .
- ▶ Press button ▼ or ▲ to select the Belt Adjustment function.



- ▶ Press button  again if you would like to change the current status. Depending on the previous status, the Belt Adjustment function will be Enabled or Disabled.

<sup>32</sup> Depending on vehicle production date