

Control systems

COMAND vehicle menu

- ▶▶▶ **Selecting a setting:** Slide or rotate .
- ▶ **Confirming selection:** Press .

Setting interior ambient lighting


The components and operating principles of COMAND can be found on (▶ page 79).

You can adjust the brightness of the interior lighting on a scale of “0” (off) to “5” (bright).

- ▶ Select “Vehicle”.

The main area is active.

- ▶ **Selecting “Interior Ambient Light” menu:** Slide or rotate .
- ▶ **Confirming selection:** Press .

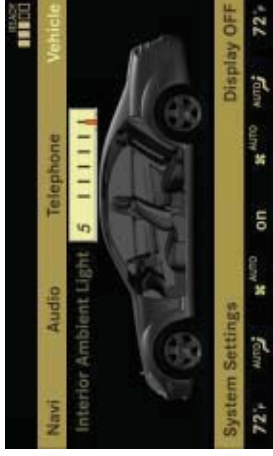

- ▶ **Adjusting brightness:** Slide or rotate .
- ▶ **Confirming selection:** Press .

or

- ▶ Select “Vehicle” → “Vehicle” → “Interior Ambient Light”.



- ▶ **Adjusting brightness:** Slide or rotate .
- ▶ **Confirming selection:** Press .