


Controls in detail

Power tilt/sliding sunroof

- 1 With the SmartKey in starter switch position 0 or removed from the starter switch, the tilt/sliding sunroof can be operated
 - until you open the driver's or passenger door
 - for up to approximately 5 minutes

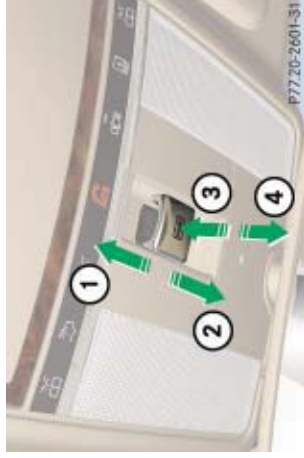

- 1 Push back to slide sunroof open
- 2 Push forward to slide sunroof closed
- 3 Push up to raise sunroof at rear
- 4 Pull down to lower sunroof at rear

With the sunroof closed or tilted open, a screen can be slid into the roof opening to help provide shade. When sliding the sunroof open, the screen will also retract.

- ▶ Switch on the ignition (▷ page 322).

- ▶ To open, close, raise or lower, move the switch to resistance point in the required direction ① to ④ until the tilt/sliding sunroof has reached the desired position.

- ▶ **Express-operation:** To open, close, raise or lower, move the switch past the resistance point in the required direction ① to ④ and release.

The tilt/sliding sunroof opens or closes completely.

- ▶ **Stopping during Express-opening/closing:** Move the switch in any direction.

- 1 *If the movement of the tilt/sliding sunroof is blocked during the closing procedure, the sunroof will stop and reopen slightly.*

Synchronizing

The tilt/sliding sunroof must be synchronized

- after the tilt/sliding sunroof has been closed manually (▷ page 636)

- if the tilt/sliding sunroof can only be opened with a jerking motion
- after a malfunction

! *Do not open the tilt/sliding sunroof completely if it is not aligned. Otherwise you could damage the tilt/sliding sunroof.*

- ▶ Switch on the ignition (▷ page 322).
- ▶ Press and hold the sunroof switch in the direction of arrow ③ until the tilt/sliding sunroof is fully raised at the rear.
- ▶ Keep holding the sunroof switch in the direction of arrow ③ for approximately 1 second.
- ▶ Check the Express-operation feature (▷ page 456).

If the tilt/sliding sunroof opens completely, the sunroof is synchronized. Otherwise repeat the above steps.