


**MODEL 216 with ENGINE 156, 273, 275 with CODE (494) USA version**

**MODEL 221 with ENGINE 156, 272, 273, 275 with CODE (494) USA version**

**Shown on model 221**

- 1 Water drain hose
- 2 Hoses
- 3 Activated charcoal canister
- 4 Electrical connector
- 5 Bolt
- 6 Nut

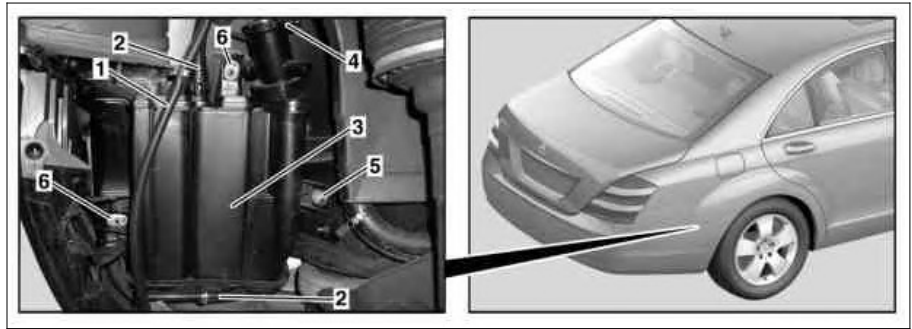

P47.30-2188-04

	<b>Remove/install</b>		
<b>Danger!</b>	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
<b>Danger!</b>	<b>Risk of explosion</b> caused by fuel igniting, <b>risk of poisoning</b> caused by inhaling and swallowing fuel and <b>risk of injury</b> to eyes and skin caused by contact with fuel	No fire, sparks, open flames or smoking. Only pour fuels into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
<b>1</b> <b>AP</b>	Remove right <b>rear wheel</b> Remove/install wheels, rotate if necessary		AP40.10-P-4050SX
<b>2</b>	Remove wheelhousing liner in <b>right</b> rear fender		
<b>3</b>	Detach water drain hose (1) and place to one side	Only if fitted.	
<b>4</b>	Detach hoses (2) from activated charcoal canister (3)		
<b>5</b>	Disconnect electrical connector (4)		
<b>6</b>	Unscrew bolt (5) and nut (6)		
<b>7</b>	Remove activated charcoal canister (3)		
<b>8</b>	Install in the reverse order		