 



COMAND navigation (introduction)

- ▶ **Adjusting:** Select “Navi” → “Navi” → “Map Display”.
The map display list appears. A dot • indicates the current setting.
- ▶ Select “Standard symbols”, “Personal symbols” or “No symbols”.
If you select “Personal symbols”, the list of POIs appears.
- ▶ **Switching POI symbol display on or off:** Select the desired POI.
The corresponding symbol displays are switched on or off, depending on the previous status. A checkmark indicates which status is active. You can switch on the symbol displays for more than one POI.
- ▶ **Exiting menu:** Slide  or press back button  in the center console (▷ page 88).
- ▶ **Arrival time and distance**
You can set whether the estimated arrival time and the distance to the destination should be displayed in the map.
 - ▶ **Displaying:** Select “Navi” → “Navi” → “Map Display”.
The map display list appears. A dot • indicates the current setting.
 - ▶ Select “Arrival Time/Distance”.
Depending on the previous status the display showing the arrival time and distance is switched on or off.
- ▶ **Current street**
You can set whether the current street you are driving on should be displayed in the map.
 - ▶ **Displaying:** Select “Navi” → “Navi” → “Map Display”.
The map display list appears. A dot • indicates the current setting.
 - ▶ Select “Current Street”.
Depending on the previous status the display showing the current street is switched on or off.

i The list shows all symbols that are contained in the digital map across all states (USA) and/or provinces (CDN). Not all POIs in all states (USA) or in all provinces (CDN) are available, however. Certain POI symbols may not be displayed on the map, even if the symbol display is switched on.