

Controls in detail

Seats

▷▷ **i** Depending on the seat's set fore and aft position, the head restraint height is automatically pre-set.


Luxury head restraint* adjusting

- **Adjusting side cushions:** Pull or push side cushions ① into desired position.
- **Adjusting forward or backward:** Pull or push head restraint in direction of arrow ②.



Warning!

When folding back the side cushions, never reach between the side cushion and the mounting post. You could otherwise be trapped.

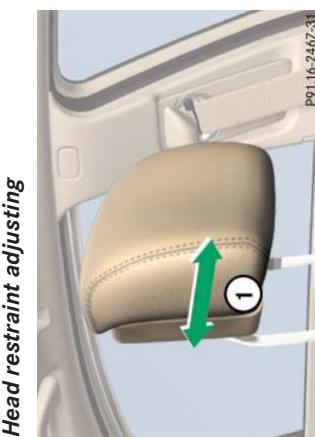

Head restraint adjusting

- ① Adjusting head restraint
- Push or pull on the upper edge of the head restraint cushion to the desired position.

P91.16-23133-31

Rear head restraints

Warning!

For safety reasons, always drive with the rear head restraints in the upright position when the rear seats are occupied. Otherwise, the back of the head will not be supported in the event of a collision. As a result, rear seat occupants could be injured.

Warning!

Keep the area around head restraints clear of articles (e.g. clothing) to not obstruct the folding operation of the head restraints.

You can individually adjust side cushions ① of the luxury head restraints.